



Avaya HC050 Camera

Quick Setup Guide



Congratulations on purchasing your PTZ HC050 Camera for the Avaya Scopia® XT Series. This brings a high quality full HD video source to your endpoint, with HD 1080p 30 frames per second (fps), including 12x Optical Zoom, 16x Digital zoom (total 192x), and an optimal horizontal field of view for video conferencing rooms.

Package Content:

- Avaya HC050 Camera
- 3m USB cable
- HC050 Wall Mount
- AC power adapter
- Remote Control
- Remote control Batteries

Setting Up this Device

Avaya HC050 Camera can be use as first or additional camera on XT4300, XT5000, and XT7100. Please follow the below instructions to connect and use HC050 Camera.



CAUTION: Make sure all units are switched off whenever connecting or disconnecting devices.

1. Use HC050 Camera as main camera

Step 1

Insert the USB connector to its socket at rear of the camera.

Step 2

Attach the USB connector to the USB upper socket at the rear of the XT Series endpoint (XT4300, XT5000 or XT7100).

Step 3

If using HC020 as first camera, you should enable it as Default Camera in:

**Configure > Advanced > I/O connections
> Cameras > General > Default Camera: USB**

2. Use HC050 Camera as USB camera for your Equinox client

Step 1

Connect the HC050 Camera to your laptop.

Step 2

Launch the Equinox client and select the device (Avaya HC050) from the Settings > User Preferences page of your Equinox Client.

Step 3

Under this configuration, HC050 camera can be controlled using the provided remote control.



XT5000 Series Codec Unit



XT7000 Series Codec Unit

