



Grandstream Networks, Inc.

GXV3370/3380/3350

IP Multimedia Phone for Android™

BroadWorks BLF User Guide



Table of Contents

INTRODUCTION.....	3
OVERVIEW OF FUNCTIONS	4
Auto Provision the BLF List on the Phone	4
Visual Indicators.....	7
Directed Call Pickup.....	8
Call Parking Notification.....	9



Table of Tables

Table 1: The BLF Indicators Status in Different Scenarios	7
---	---

Table of Figures

Figure 1: Configure the SIP Account Settings.....	4
Figure 2: Configure Special Feature Option	5
Figure 3: Programmable Key General Settings	5
Figure 4 Programmable Keys App on LCD.....	6
Figure 5: BLF Entries on Programmable Key Widget.....	6
Figure 6: BLF Indicators Status	7
Figure 7: Configure BLF Call Pickup Prefix	8
Figure 8: Directed Pickup on Programmable Key.....	9
Figure 9: Call Parking Notification on Programmable Key App	10



INTRODUCTION

Busy Lamp Field (BLF) feature allows an end user, such as attendant, to monitor the hook status of a list of users. This document serves as an end user guide on how to configure Grandstream GXV3370/3380/3350 Multimedia phones for BroadWorks Busy Lamp Field feature. How to configure BLF on BroadWorks Application Server is out of the scope of this document.




OVERVIEW OF FUNCTIONS

Grandstream GXV3370/3380/3350 Enterprise Multimedia Phone for Android™ supports the BroadWorks Busy Lamp Filed feature. GXV3370/3380/3350 support this feature by changing the frame color of the block icons, associated with the monitored user, on the Account/Programmable Key widget. Additionally, the phone system is also able to pick up the calls to the monitored extensions.

Auto Provision the BLF List on the Phone

Configuring the GXV3370/3380/3350 Multimedia Phones to work with BroadWorks Busy Lamp Field feature is straightforward. First configure the SIP account settings just as you would for a normal SIP account. Then after the SIP account is registered with BroadWorks server, fill in the **Eventlist BLF URI** under the **Programmable Key General Settings** page of the web UI. The detail steps are listed below:

1. Configure the **SIP Account Settings** under **Account Settings** → **General Settings**:

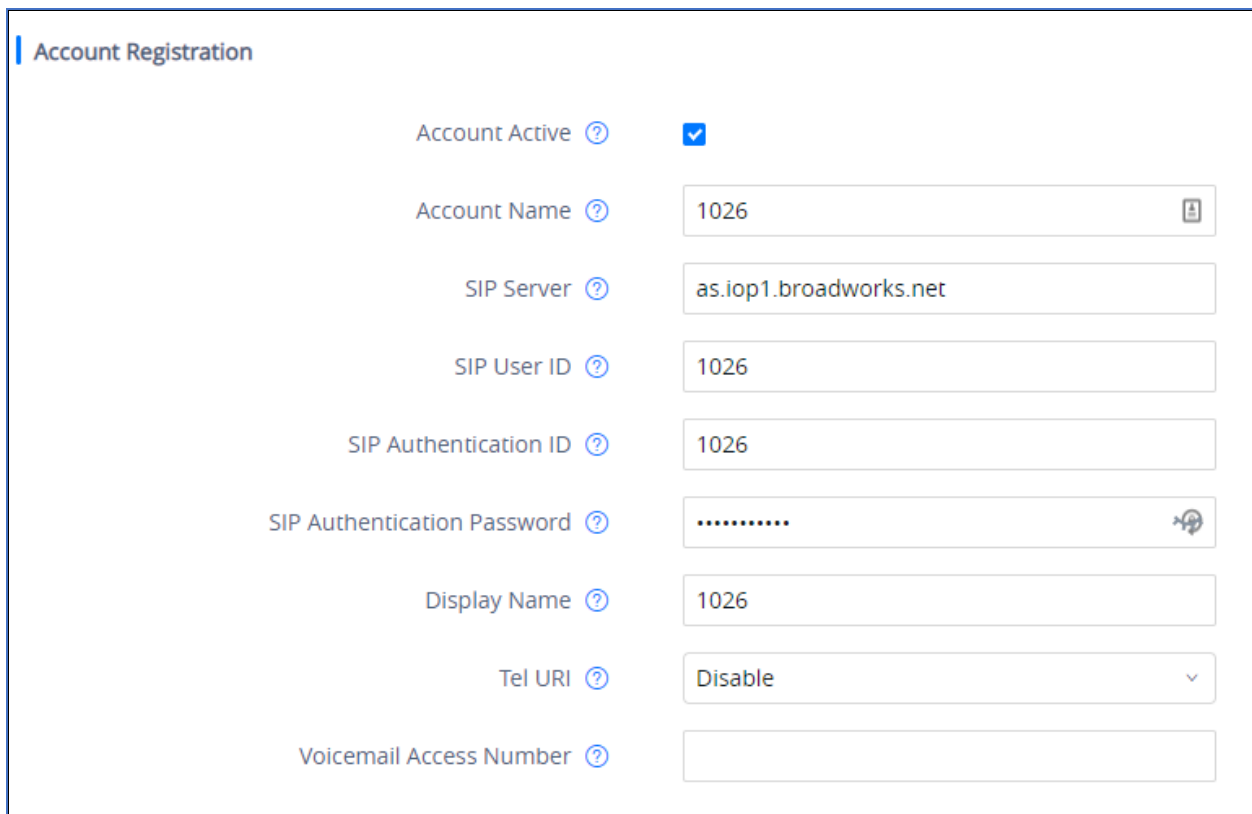

The screenshot shows the 'Account Registration' page in a web UI. It contains several configuration fields for a SIP account. The 'Account Active' checkbox is checked. The 'Account Name' is '1026'. The 'SIP Server' is 'as.iop1.broadworks.net'. The 'SIP User ID' is '1026'. The 'SIP Authentication ID' is '1026'. The 'SIP Authentication Password' is masked with dots. The 'Display Name' is '1026'. The 'Tel URI' is set to 'Disable'. The 'Voicemail Access Number' field is empty.

Field	Value
Account Active	<input checked="" type="checkbox"/>
Account Name	1026
SIP Server	as.iop1.broadworks.net
SIP User ID	1026
SIP Authentication ID	1026
SIP Authentication Password
Display Name	1026
Tel URI	Disable
Voicemail Access Number	

Figure 1: Configure the SIP Account Settings

2. Configure **Special Feature** to “**BroadSoft**”, under **Account** → **Advanced Settings**, as the figure shows below:

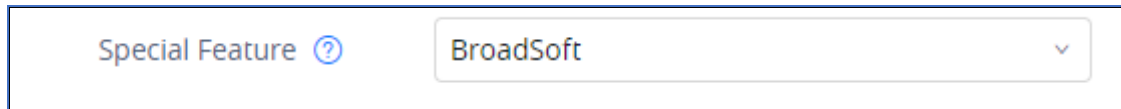
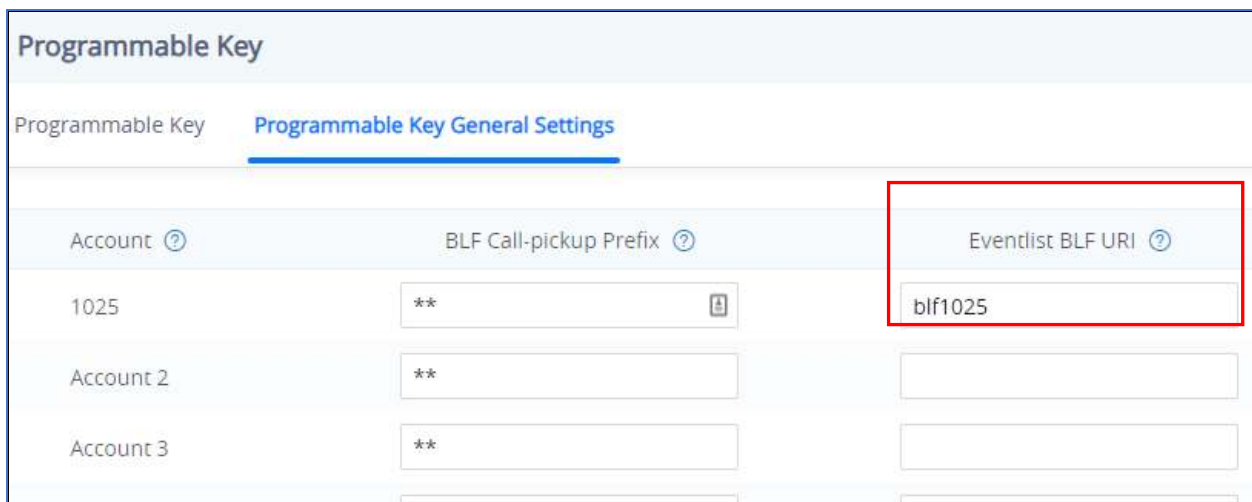

 A screenshot of a configuration field labeled "Special Feature" with a help icon. The dropdown menu is open, showing "BroadSoft" as the selected option.

Figure 2: Configure Special Feature Option

3. Configure web UI → **Applications** → **Programmable Key** → **Programmable Key General Settings** → **Eventlist BLF URI**.

Note: Instead of configuring the ID and domain name, the URI needs to include the ID only. For example, if the BLF URI is blf1025@as.iop1.broadworks.net, it only needs to fill blf1025 in the box. After saving and rebooting, the BLF entries will be provisioned to the Programmable Key widget automatically.


 A screenshot of the "Programmable Key" settings page, specifically the "Programmable Key General Settings" tab. The page shows a table with columns for "Account", "BLF Call-pickup Prefix", and "Eventlist BLF URI". The first row is highlighted, showing "1025" for the account, "**" for the prefix, and "blf1025" for the URI. The "Eventlist BLF URI" column is highlighted with a red box.

Account	BLF Call-pickup Prefix	Eventlist BLF URI
1025	**	blf1025
Account 2	**	
Account 3	**	

Figure 3: Programmable Key General Settings

4. From LCD, open the Programmable Keys app.



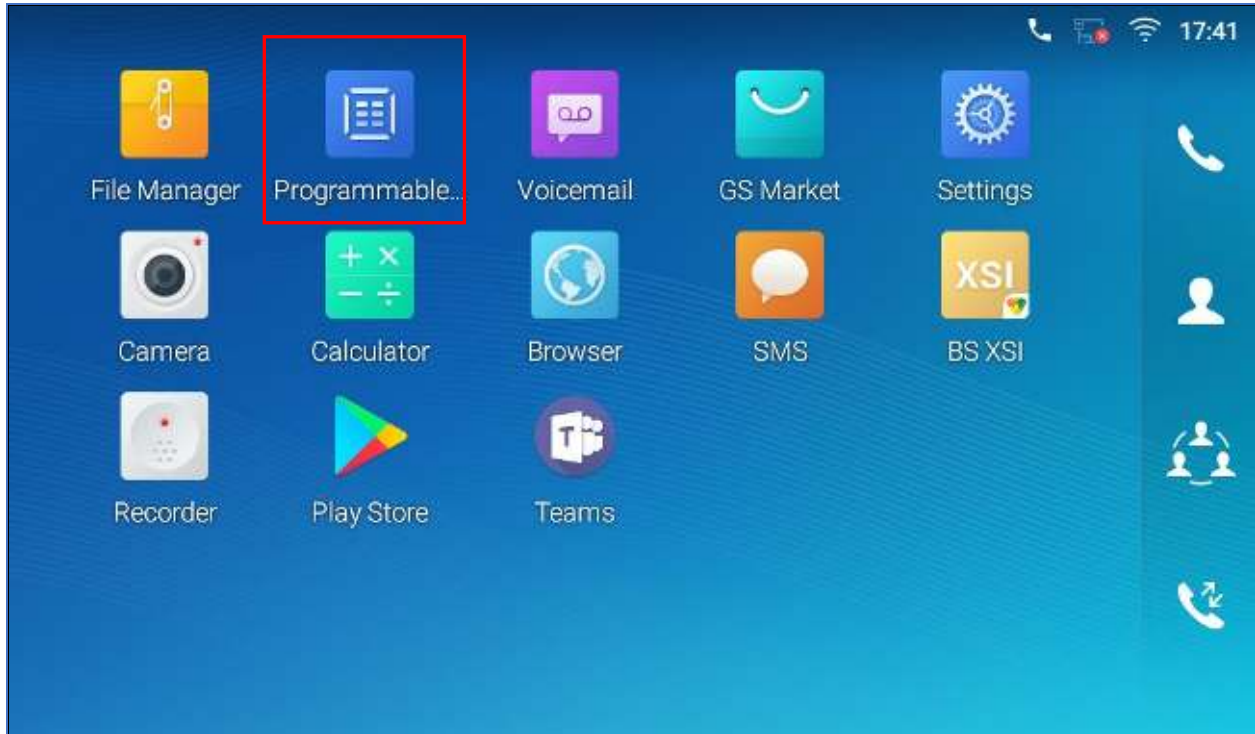


Figure 4 Programmable Keys App on LCD

- The following screenshot is an example of the BLF entries provisioned on the Programmable Key app on LCD:

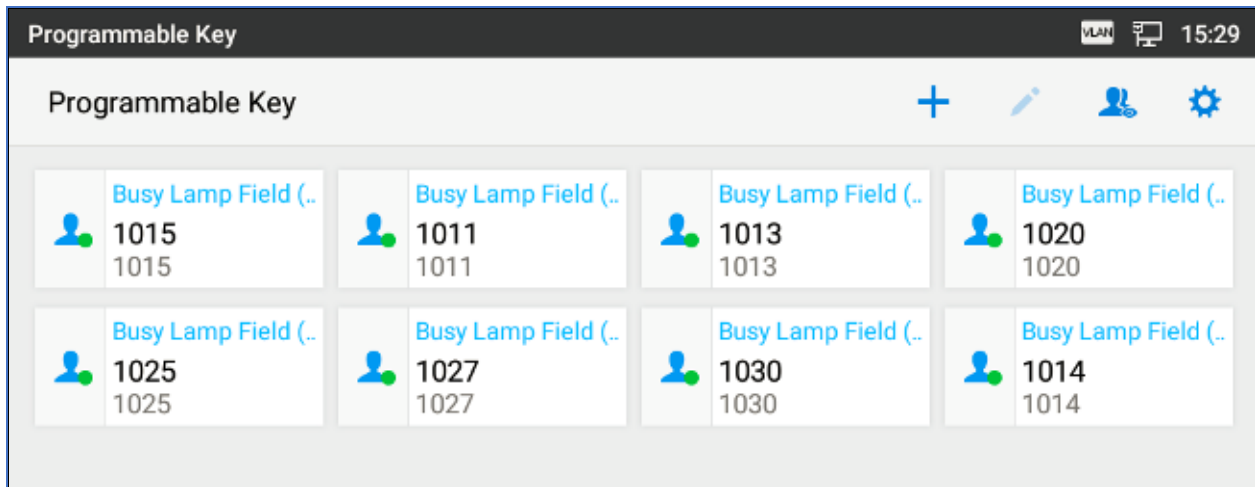


Figure 5: BLF Entries on Programmable Key Widget

Visual Indicators

The phone system can notify the end user the hook status of the monitored extension by changing the icon color and status.

For example, the screenshot below shows the BLF indicators' status when the extension 1014 places a call to the extension 1025. While the extension 1025 is ringing, the caller 1014's indicator is blinking green and the callee 1025's indicator is blinking red. On the account widget, the indicators' status is same as the ones on the Programmable Key widget.

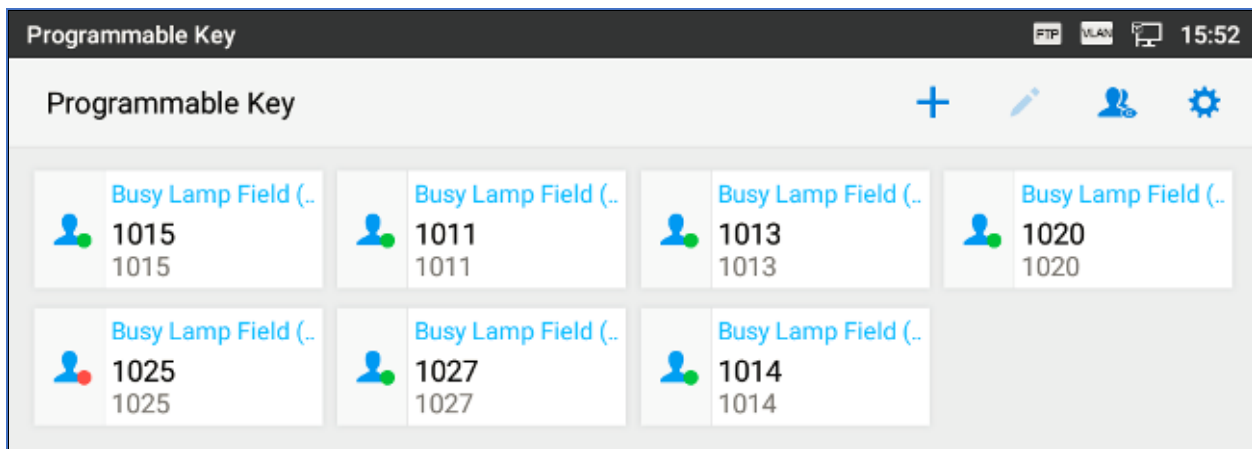


Figure 6: BLF Indicators Status

The following table shows the BLF indicator status in different scenarios, it requires the monitored extension to enable the BLF feature:

Table 1: The BLF Indicators Status in Different Scenarios

Monitored extension behavior	BLF indicator status (Programmable Keys in app)	BLF key status (Programmable Keys in account widget)	BLF key status (GBX20 extension board)
Idle	Solid green	Solid green	Solid green
Placing a call	Blinking green	Blinking green	Blinking green
Ringing	Blinking red	Blinking red	Blinking red
During a call	Solid red	Solid red	Solid red
Hold the call	Solid red	Solid red	Solid red
Call Park	Solid green (With "P" sign)	Solid green (With "P" sign)	Solid green (With "P" sign)




Monitored extension not registered/BLF subscription failed	Off	Off	Off
--	-----	-----	-----

Directed Call Pickup

Directed call pickup feature allows the GXV33XX phone system to be able to answer the calls to the monitored users. This feature is very useful for the attendant to help the specified callees to answer the call if the callees are not available to answer it.

For the BroadWorks system, it requires to dial the specified prefix ahead of the monitored extension to directed pick up the call. Thus, the end user must configure the prefix to GXV33XX to implement this feature.

The following screenshot shows the *97 is configured as the prefix under the Programmable Key General Settings page:

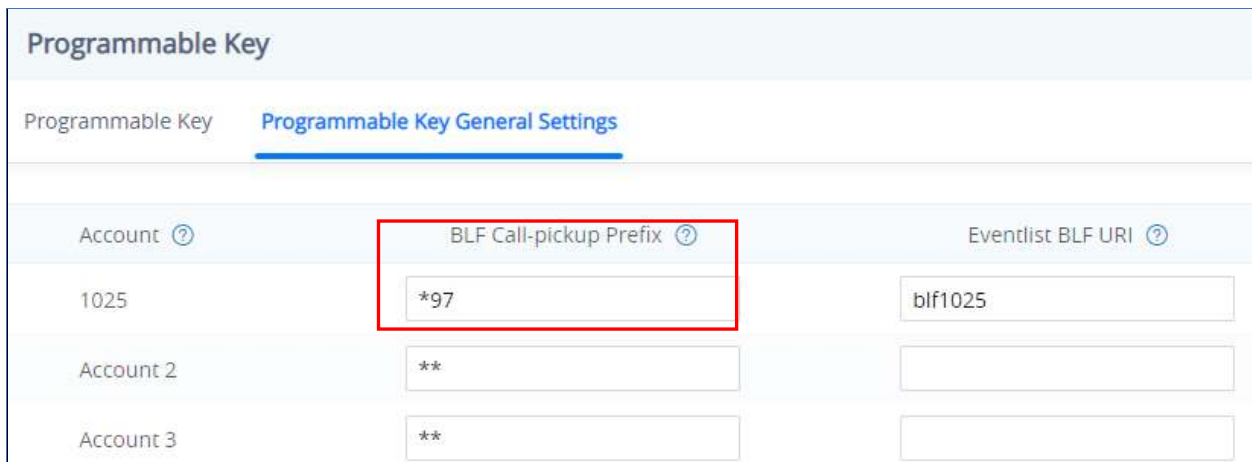

The screenshot shows the 'Programmable Key' configuration page with the 'Programmable Key General Settings' tab selected. A table lists three accounts. The first account, '1025', has its 'BLF Call-pickup Prefix' field highlighted with a red box and contains the value '*97'. The 'Eventlist BLF URI' field for this account contains 'blf1025'. The other two accounts, 'Account 2' and 'Account 3', have their 'BLF Call-pickup Prefix' fields set to '**' and their 'Eventlist BLF URI' fields are empty.

Account	BLF Call-pickup Prefix	Eventlist BLF URI
1025	*97	blf1025
Account 2	**	
Account 3	**	

Figure 7: Configure BLF Call Pickup Prefix

Then, when the monitored user's indicator is blinking red, namely there is an incoming call, the GXV33XX phone user should tap the "Busy Lamp Field" icon to answer the call for the monitored user.

The red dot in the following screenshot is the area, which the end user could tap to directed pick up the call:



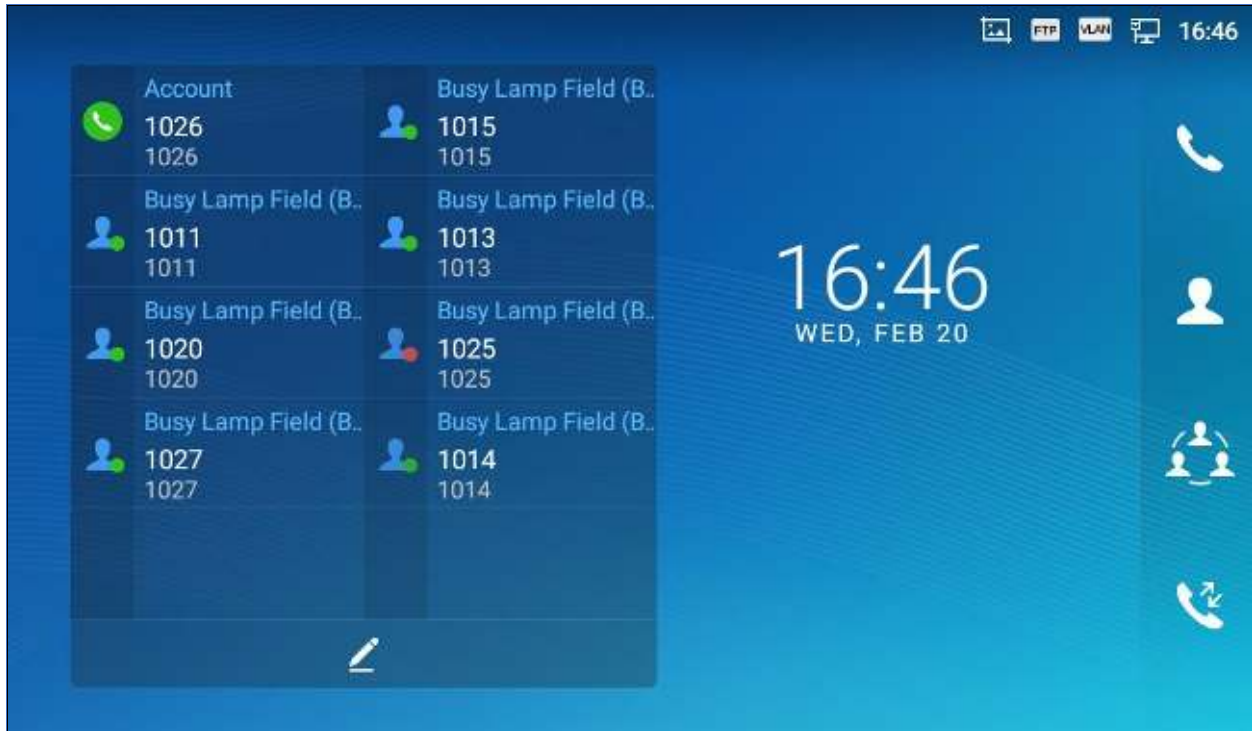


Figure 8: Directed Pickup on Programmable Key

Call Parking Notification

GXV33XX phones can display a parked indicator for the monitored extensions if an active call is parked on it. The “P” letter sign in the following figure represents a call is parked on the monitored extension 1027. And it will be turned off once the parked call is retrieved.

The “P” letter sign also can be shown on the account widget on the LCD.



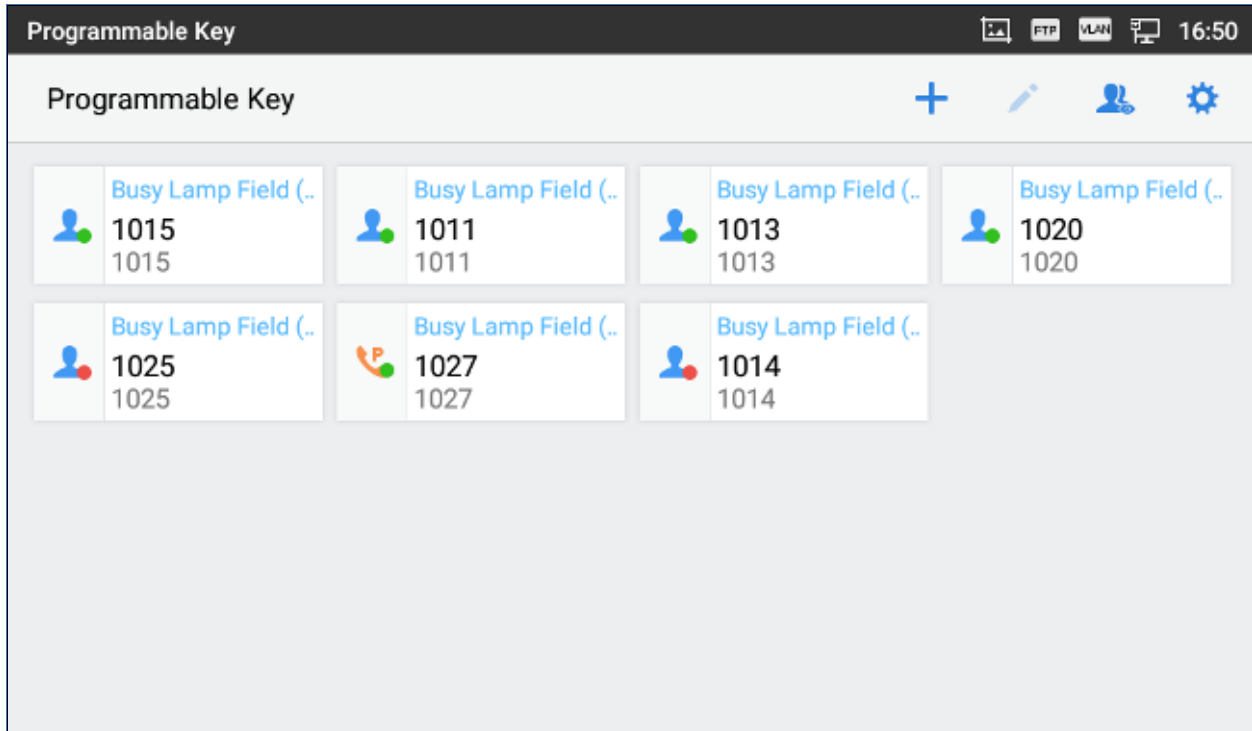


Figure 9: Call Parking Notification on Programmable Key App

*Android is a trademark of Google LLC.

