



Grandstream Networks, Inc.

UCM6xxx Series - Analog Trunks Guide



Table of Contents

INTRODUCTION.....	4
UCM6XXX SETUP OVERVIEW.....	5
CONFIGURING ANALOG TRUNKS	6
PBX Status.....	6
Configure a New Analog Trunk	6
<i>Create a New Analog Trunk</i>	<i>7</i>
Create Outbound/Inbound Rules	11
<i>Create Inbound Routes</i>	<i>11</i>
<i>Create Outbound Routes</i>	<i>13</i>
Using Analog Trunk as Failover	14
ACIM AND PSTN DETECTION	17
ACIM Settings	17
PSTN Detection	18
<i>Automatic Detection of PSTN Parameters.....</i>	<i>18</i>
<i>Manual Configuration of PSTN Parameters.....</i>	<i>21</i>
MONITORING ANALOG LINES	28
Enabling SLA Mode	28
Create/Edit SLA Station	28
Sample Configuration	30



Table of Figures

Figure 1: UCM6202 Front and Back Panels	5
Figure 2: FXO Port Connected but not Configured.....	6
Figure 3: Create a New Analog Trunk.....	7
Figure 4: Analog Trunk Configuration Page	7
Figure 5: Analog Trunk Created	11
Figure 6: Create New Inbound Rule	12
Figure 7: Inbound Rules with Time condition	12
Figure 8: Inbound Routes Created.....	13
Figure 9: Create a New Outbound Rule.....	13
Figure 10: Outbound Rule Created.....	14
Figure 11: Add Analog Trunk as Failover	15
Figure 12: Analog Trunk added as Failover	16
Figure 13: Ports Config Page.....	17
Figure 14: ACIM Settings	18
Figure 15: UCM6XXX FXO Tone Settings	19
Figure 16: UCM6XXX PSTN Detection: Auto Detect.....	19
Figure 17: UCM6XXX PSTN Detection: Semi-Auto Detect	20
Figure 18: Answering Call Prompt	20
Figure 19: Hangup Call Prompt	21
Figure 20: PSTN Parameters Detected	21
Figure 21: Custom Tone Parameters	22
Figure 22: Download Analog Trace.....	23
Figure 23: A key dial-up FXO	24
Figure 24: Import Raw File to Audacity	24
Figure 25: Import Raw Data Parameters	25
Figure 26: Raw Data Imported	25
Figure 27: Measuring Cadence.....	26
Figure 28: Busy Tone Frequencies	27
Figure 29: Enable SLA Mode for the Analog Trunk.....	28
Figure 30: SLA Station Page.....	28
Figure 31: Create New SLA Station	29
Figure 32: Enable SLA Mode for Analog Trunk.....	30
Figure 33: Analog Trunk with SLA Mode Enabled	30
Figure 34: SLA Example - SLA Station	30
Figure 35: SLA Example - MPK Configuration.....	31



INTRODUCTION

UCM6XXX series have integrated FXO ports allowing connection of PSTN lines and/or lines from traditional analog PBX. An analog trunk can be defined as a single line or multiple lines (PSTN lines or lines from traditional analog PBX). Each UCM6XXX supports at least 2 FXO ports and reaching 16 FXO ports for UCM6116 model.

Using analog trunks allow customers to keep using their actual PSTN lines/PBX lines and integrating them to VoIP systems such as UCM6xxx giving it hybrid capability from VoIP to PSTN and vice versa and taking VoIP and other services offered by UCM6xxx including mobility and reducing calling costs, call recording, IVR, privileges and rules for users, ability to use analog trunk from remote extensions...

In this guide, we will be using UCM62xx as example to provide steps on how to configure Analog Trunks as well as basic Inbound/Outbound Rules, ACIM Settings and PSTN Detection configuration, and how to monitor analog trunks using SLA Station.

Note that the same steps showed in this guide can be applied for all UCM6XXX models.

Notes:

- UCM6xxx Series include UCM6200 Series and UCM6510.
 - UCM6200 series supports 2/4/8 Ports.
 - UCM6510 supports 2 FXO Ports.
-



UCM6XXX SETUP OVERVIEW

To connect analog lines to UCM6xxx, please follow the below steps:

- Connect the UCM6XXX to the Network via WAN/LAN Port, and power it on.
- Once the UCM6XXX boots up and connects to the network, the corresponding LAN/WAN LED indicators will be in solid green and the LCD shows the IP address
- Connect the Analog lines from the wall jack/CO switch to the FXO ports, the corresponding FXO LEDs will be in solid green.

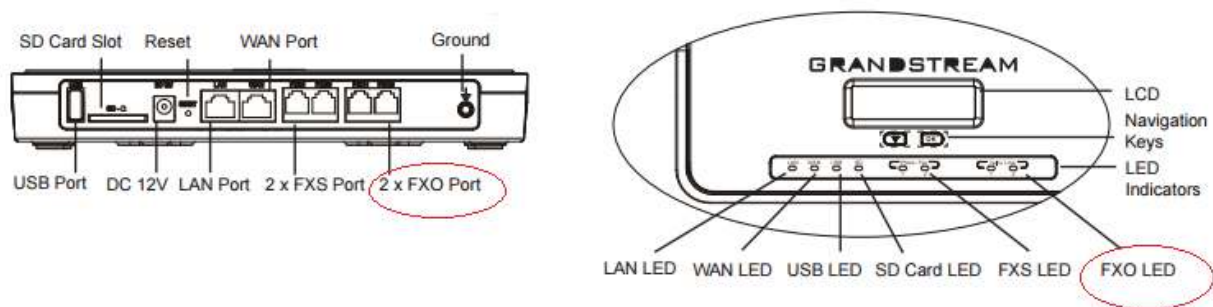


Figure 1: UCM6202 Front and Back Panels

Once the FXO ports are physically connected to analog lines, users may login to the UCM6XXX's Web GUI to configure the Analog Trunks settings and outbound/inbound rules.

CONFIGURING ANALOG TRUNKS

Use a computer connected to the same network as the UCM6XXX, then login to the web GUI of the UCM6XXX by typing the IP address shown on its LCD on your browser, and type in the admin username and password.

PBX Status

After login, the first default page will show the UCM6XXX status, this will help users to check the FXO Ports status and give the ability to quickly see the FXO overview, without physically monitoring the FXO LEDs.

When connecting a new analog line to an FXO port, its interface status on the web GUI will be in solid grey and shows *connected but not configured*, as shown in the below figure.

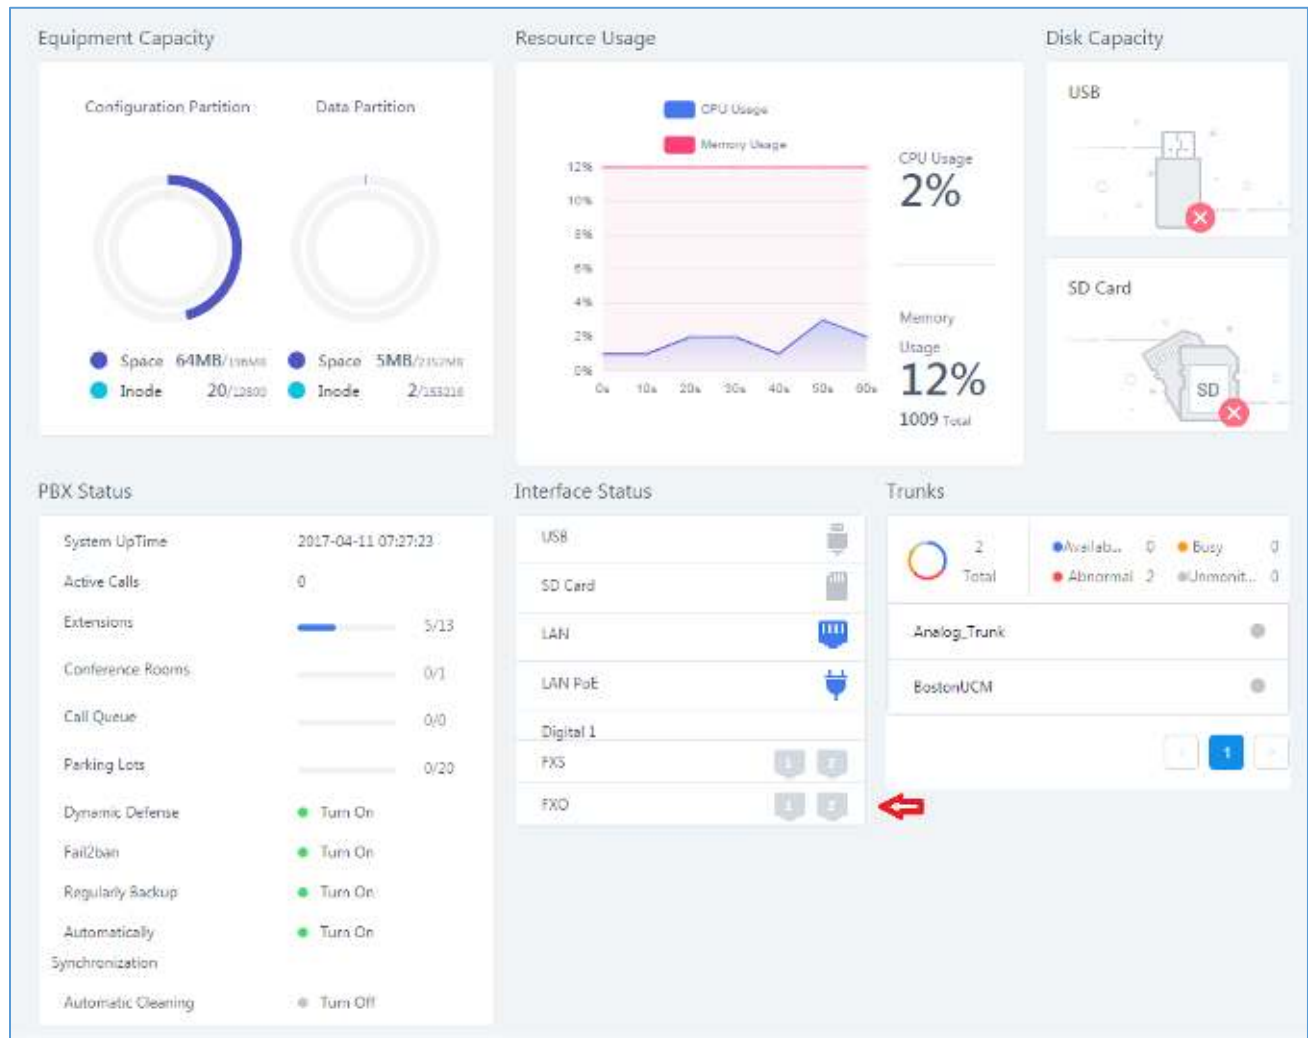


Figure 2: FXO Port Connected but not Configured

FXO icon in green indicates analog trunk is ready, while in orange color, it indicates the trunk is used.

Configure a New Analog Trunk

This section will give an overview on how to create/edit analog trunks, and detect PSTN parameters.

Create a New Analog Trunk

To create a new analog trunk:

1. Go to Web GUI→PBX→Extension/Trunk→Analog Trunks.
2. Click on **+ Add** to add a new analog trunk.


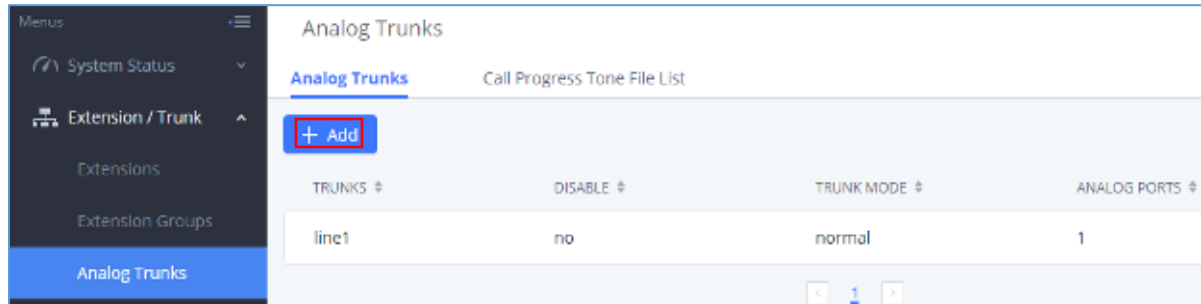


Figure 3: Create a New Analog Trunk

3. The following figure will pop up, allowing users to configure the connected analog lines to the FXO port.

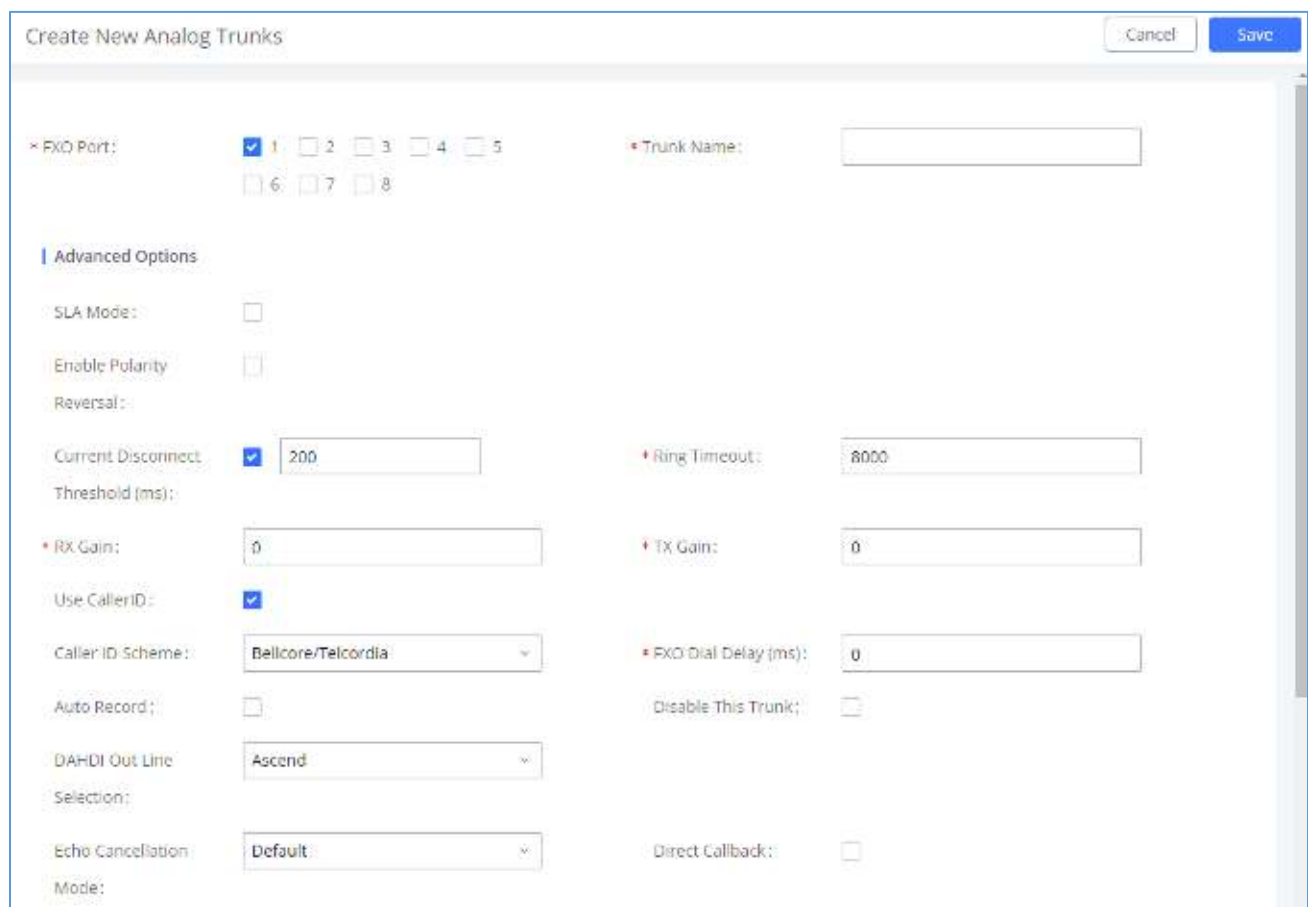

Create New Analog Trunks [Cancel] [Save]

FXO Port: 1 2 3 4 5
 6 7 8

Trunk Name:

Advanced Options

SLA Mode:

Enable Polarity:

Reversal:

Current Disconnect Threshold (ms): 200

Ring Timeout:

RX Gain:

TX Gain:

Use CallerID:

Caller ID Scheme:

FXO Dial Delay (ms):

Auto Record:

Disable This Trunk:

DAHDI Out Line Selection:

Echo Cancellation Mode:

Direct Callback:

Figure 4: Analog Trunk Configuration Page

Please refer to the following table for Analog Trunk configuration parameters.

Table 1: Analog Trunk Configuration Parameters

FXO Port	<p>Select the channel where analog trunk is connected (Channel 1, Channel2...)</p> <ul style="list-style-type: none"> • UCM6202/UCM6102/UCM6510: 2 channels • UCM6204/UCM6104: 4 channels • UCM6208/UCM6108: 8 channels <p>Note: Users can select multiple channels if the trunk is using multiple lines. Please refer to [DAHDI Out Line Selection] for more options.</p>
Trunk Name	Specify a unique label to identify the trunk when listed in outbound/inbound rules.
SLA Mode	Enable this option to satisfy two primary use cases, which include emulating a simple key system and creating shared extensions on a PBX. Enable SLA Mode will disable polarity reversal. Please refer to Enabling SLA Mode section for more details.
Barge Allowed	Available only if “SLA Mode” is enabled, the barge option specifies whether or not other SLA stations are allowed to join a call in progress on this trunk. If enabled, the other stations can press the line button to join the call. The default setting is Yes.
Hold Access	Available only if “SLA Mode” is enabled, the hold option specifies hold permissions for this trunk. If set to “Open”, any SLA station can place this trunk on hold and any other SLA station is allowed to retrieve the call. If set to “Private”, only the station that places the call on hold can retrieve the call. The default setting is Yes.
Advanced Options	
Enable Polarity Reversal	If enabled, a polarity reversal will be marked as received when an outgoing call is answered by the remote party. For some countries, a polarity reversal is used for signaling the disconnection of a phone line and the call will be considered as “hang up” on a polarity reversal. The default setting is “No”.
Polarity on Answer Delay	When FXO port answers the call, FXS may send a Polarity Reversal. If this interval is shorter than the value of “Polarity on Answer Delay”, the Polarity Reversal will be ignored. Otherwise, the FXO will on-hook to disconnect the call. The default setting is 600ms.
Current Disconnect Threshold (ms)	This is the periodic time (in ms) that the UCM6200 will use to check on a voltage drop in the line. The default setting is 200. The valid range is 50 to 3000.
Ring Timeout	Configure the ring timeout (in ms). Trunk (FXO) devices must have a timeout to determine if there was a Hangup before the line is answered. This value can be used to configure how long it takes before the UCM6200 considers a non-ringing line with Hangup activity. The default setting is 8000.
RX Gain	Configure the RX gain for the receiving channel of analog FXO port. The valid range is from -13.5 (dB) to + 12.0 (dB). The default setting is 0.
TX Gain	Configure the TX gain for the transmitting channel of analog FXO port. The valid range is from -13.5 (dB) to + 12.0 (dB). The default setting is 0.





Use CallerID	Configure to enable CallerID detection. The default setting is “Yes”.
Fax Mode	Configures how faxes to this extension will be handled. None: Faxes will not be processed. Fax Gateway: Faxes to this extension will be processed and converted from T.30 to T.38 or vice-versa. FXS/FXO ports only. The default setting is None.
Caller ID Scheme	Select the Caller ID scheme for this trunk. The default setting is “Bellcore/Telcordia”.
FXO Dial Delay(ms)	Configure the time interval between off-hook and first dialed digit for outbound calls.
Auto Record	Enable automatic recording for the calls using this trunk. The default setting is disabled. Recording files can be accessed under web GUI→ CDR → Recording Files .
Disable This Trunk	If selected, the trunk will be disabled.
DAHDI Out Line Selection	This is to implement analog trunk outbound line selection strategy. Three options are available: <ul style="list-style-type: none"> • Ascend When the call goes out from this analog trunk, it will always try to use the first idle FXO port. The port order that the call will use to go out would be port 1→port 2→port 10→port 16. Every time it will start with port 1 (if it's idle). • Poll When the call goes out from this analog trunk, it will use the port that is not used last time. And it will always use the port in the order of port 1→2→10→16→1→2→10→16→1→2→10→16..., following the last port being used. • Descend When the call goes out from this analog trunk, it will always try to use the last idle FXO port. The port order that the call will use to go out would be port 16→port 10→port 2→port 1. Every time it will start with port 16 (if it's idle). The default setting is “Ascend” mode.
The Maximum Number of Call Lines	The number of current outgoing calls over the trunk at the same time. The default value 0 means no limit.
Echo Cancellation Mod	Specifies the method of removing/suppressing residual echo. Default: Slightly reduces the amount of detected background noise. High Noise Level Adjustment: Greatly reduces the amount of detected background noise. Noise Masking: Injects noise to mask echo and greatly reduces the amount of




	<p>detected background noise.</p> <p>White Noise Injection: Injects variable amounts of white noise based on detected background noise and greatly reduces the amount of detected background noise.</p>
Direct Callback	Allows external numbers the option to get directed to the extension that last called them.
Tone Settings	
Busy Detection	Busy Detection is used to detect far end hang-up or for detecting busy signal. The default setting is "Yes".
Busy Tone Count	If "Busy Detection" is enabled, users can specify the number of busy tones to be played before hanging up. The default setting is 2. Better results might be achieved if set to 4, 6 or even 8. Please note that the higher the number is, the more time is needed to hang-up the channel. However, this might lower the probability to get random hang-up.
Congestion Detection	Congestion detection is used to detect far end congestion signal. The default setting is "Yes".
Congestion Count	If "Congestion Detection" is enabled, users can specify the number of congestion tones to wait for. The default setting is 2.
Tone Country	Select the country for tone settings. If "Custom" is selected, users could manually configure the values for Busy Tone and Congestion Tone. The default setting is "United States of America (USA)".
Busy Tone	<p>Syntax :</p> <p>f1=val[@level],[f2=val[@level],c=on1/off1[-on2/off2[-on3/off3]]];</p> <p>Frequencies are in Hz and cadence on and off are in ms.</p> <p>Frequencies Range: [0, 4000)</p> <p>Busy Level Range: (-300, 0)</p> <p>Cadence Range: [0, 16383].</p> <p>Select Tone Country "Custom" to manually configure Busy Tone value.</p> <p>Default value:</p> <p>f1=480@-50,f2=620@-50,c=500/500</p>
Congestion Tone	<p>Syntax :</p> <p>f1=val[@level],[f2=val[@level],c=on1/off1[-on2/off2[-on3/off3]]];</p> <p>Frequencies are in Hz and cadence on and off are in ms.</p> <p>Frequencies Range: [0, 4000)</p> <p>Busy Level Range: (-300, 0)</p> <p>Cadence Range: [0, 16383].</p> <p>Select Tone Country "Custom" to manually configure Busy Tone value.</p>



	Default value: f1=480@-50,f2=620@-50,c=250/250
PSTN Detection	Click on "Detect" to detect the busy tone, Polarity Reversal and Current Disconnect by PSTN. Before the detecting, please make sure there are more than one channel configured and working properly. If the detection has busy tone, the "Tone Country" option will be set as "Custom".

Once the analog trunk is created, it can be edited anytime by clicking on  icon or deleted by clicking on  icon.

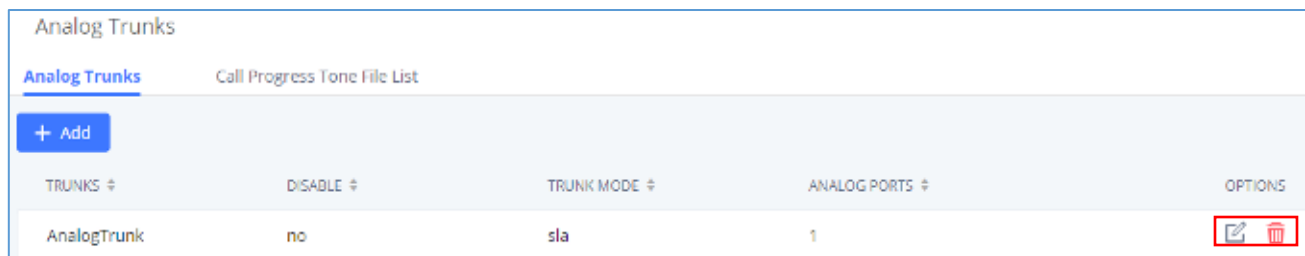



TRUNKS	DISABLE	TRUNK MODE	ANALOG PORTS	OPTIONS
AnalogTrunk	no	sla	1	 


Figure 5: Analog Trunk Created

Create Outbound/Inbound Rules

In this section, we will give an example of creating Outbound and Inbound Rules for connected analog lines to FXO ports, to allow making and receiving calls via Analog Trunks.

Create Inbound Routes

1. Go to **Extension / Trunk→Inbound Routes**.
2. Click on **"Add"**, the following figure will appear.
3. Select Analog Trunk created and Default destination (IVR, extension, ring group...).

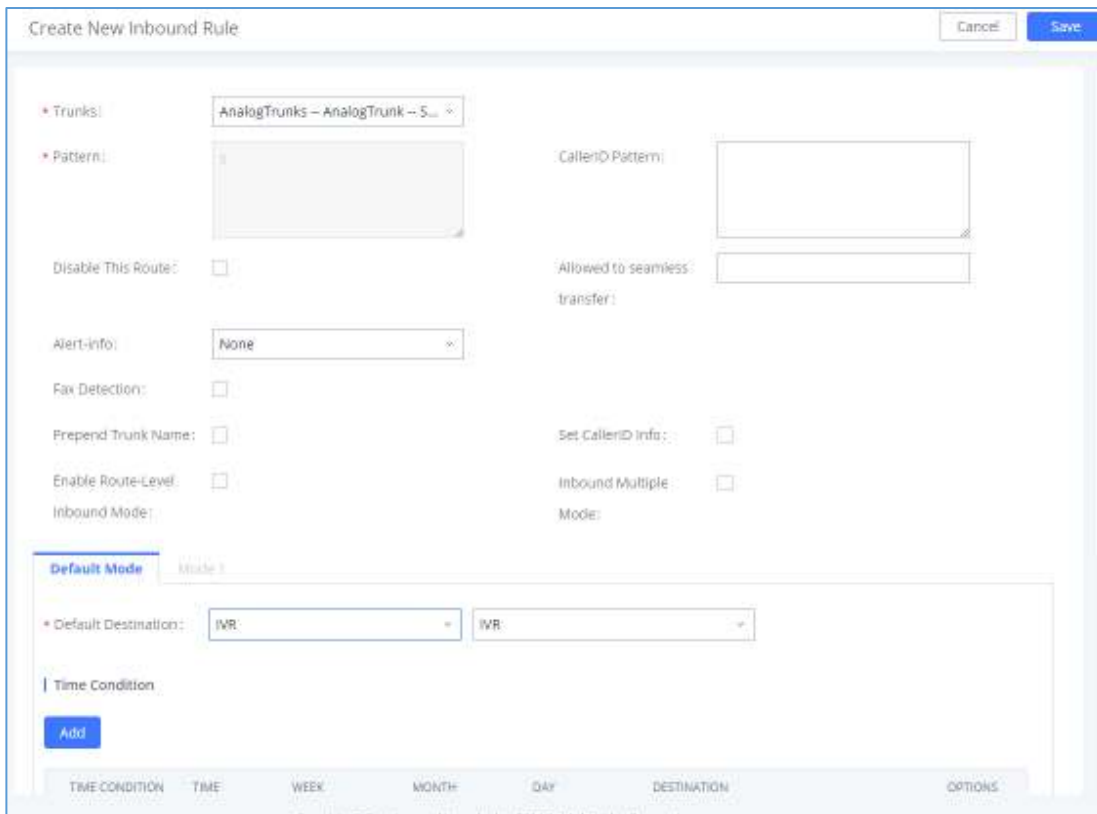

Create New Inbound Rule [Cancel] [Save]

* Trunks: AnalogTrunks – AnalogTrunk – 5... <

* Pattern: [Empty Text Area] CallerID Pattern: [Empty Text Area]

Disable This Route: Allowed to seamless transfer: [Empty Text Area]

Alert-info: None <

Fax Detection:

Prepend Trunk Name: Set CallerID Info:

Enable Route-Level Inbound Mode: Inbound Multiple Mode:

Default Mode Mode 1



* Default Destination: IVR < IVR <


Time Condition

[Add]

TIME CONDITION	TIME	WEEK	MONTH	DAY	DESTINATION	OPTIONS
----------------	------	------	-------	-----	-------------	---------

Figure 6: Create New Inbound Rule

Once the inbound rule is created, it can be edited anytime by clicking on  icon or deleted by clicking on  icon.

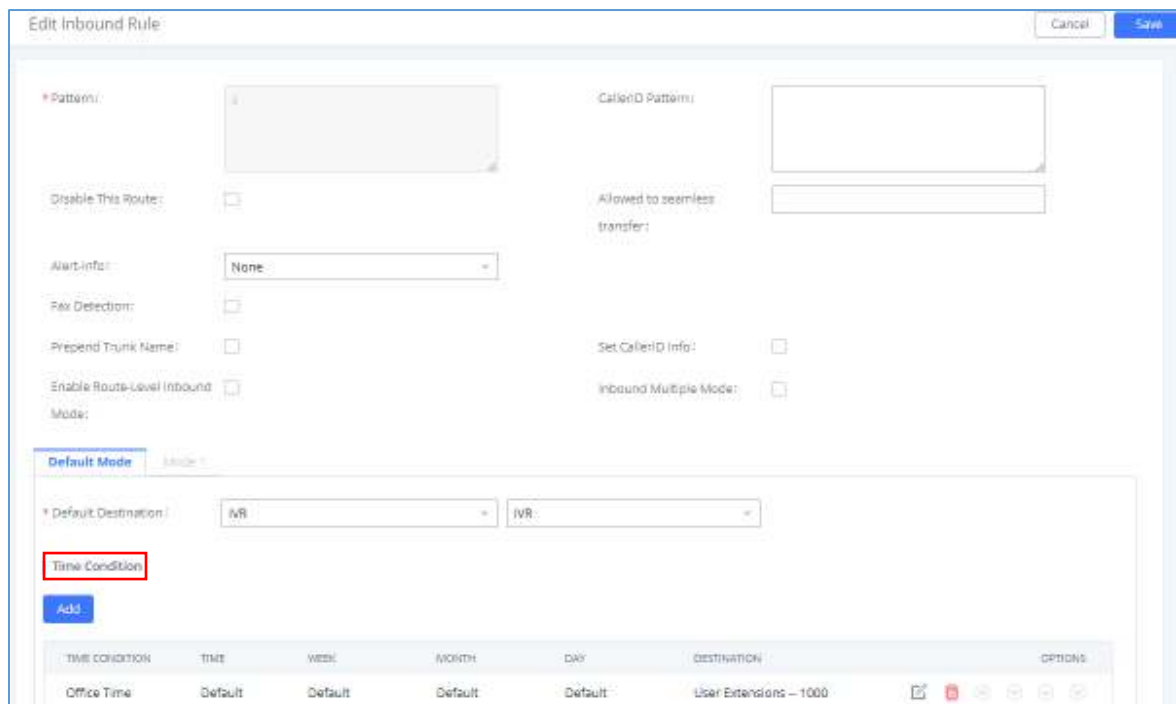

Edit Inbound Rule [Cancel] [Save]

* Pattern: [Empty Text Area] CallerID Pattern: [Empty Text Area]

Disable This Route: Allowed to seamless transfer: [Empty Text Area]

Alert-info: None <

Fax Detection:

Prepend Trunk Name: Set CallerID Info:

Enable Route-Level Inbound Mode: Inbound Multiple Mode:

Default Mode Mode 1

* Default Destination: IVR < IVR <

Time Condition

[Add]






TIME CONDITION	TIME	WEEK	MONTH	DAY	DESTINATION	OPTIONS
Office Time	Default	Default	Default	Default	User Extensions – 1000	    

Figure 7: Inbound Rules with Time condition

In the above example, incoming calls during office hours will be routed to IVR, otherwise calls will be routed to extension 1000(Out Of Office hours).

Inbound Routes								
+ Add Blacklist Set Global Inbound Mode Import Export Trunks: Analog Trunks - AnalogTrunk								
PATTERN	CALLERID PATTERN	INBOUND MODE	INBOUND MODE SUFFIX	TIME CONDITION	TIME	TYPE	DESTINATION	OPTIONS
	No Limit	Default Mode		Out of Office Time	Default		Default Mode IVR - IVR Default Mode User Extensions - 100 0	

Figure 8: Inbound Routes Created

Create Outbound Routes

1. Go to **Extension / Trunk**→**Outbound Routes**.
2. Click on **“Add”**, the following figure will appear.
3. Enter the **Calling Rule Name**, **Pattern** and choose the Analog trunk in **Use Trunk**.

Create New Outbound Rule

General

* Calling Rule Name: Disable this Route:

* Pattern: Privilege Level:

PIN Groups: PIN Groups with Privilege

Password:

Enable Filter on Source Caller ID:

Enable Filter on Source Caller ID: Outbound Route CID:

Call Duration Limit:

Call Duration Limit:

Main Trunk

* Trunk: Strip:

Prepend:



Figure 9: Create a New Outbound Rule

In this example, dialed numbers matching pattern **_9X**. will go through this analog trunk, if extension making the call has **“National”** privilege or higher. UCM6xxx will strip the leading first digit from entered number before dialing out.

For example, to dial number 06123456789, users need to have privilege **“National”** or higher on their extension(s) and dial **906123456789**, UCM6xxx will receive the calling request, and since it’s matching configured pattern **_9X**. it will strip leading digit (in this case 9) and dials the rest of the number (in this case 06123456789).




Figure 10: Outbound Rule Created

Once the outbound rule is created, it can be edited anytime by clicking on  icon or deleted by clicking on  icon.

Using Analog Trunk as Failover

Failover Trunks are used when the primary trunk fails in order to assure the continuity of external calling service for extensions.

User can setup their Analog Trunk as failover for another trunk by following the below steps:

1. Go to **Extension / Trunk**→**Outbound Routes**.
2. Click on  next to your Primary Trunk.
3. Scroll down to **Failover Trunk**, and click on **Add** to add a failover trunk.
4. Users can select then the Trunk to be set as failover as shown in figure below.

Edit Outbound Rule: to83

General

* Calling Rule Name: Disable This Route:

* Pattern: Privilege Level:

PIN Groups: PIN Groups with Privilege Level:

Password:

Enable Filter on Source Caller ID

Enable Filter on Source Caller Outbound Route CID:

Call Duration Limit

Call Duration Limit:





Main Trunk

* Trunk: Strip: Prepend:

Failover Trunk

* Trunk: Strip: Prepend:

Figure 11: Add Analog Trunk as Failover

5. Click on  to add another failover trunk.
6. Click on  to arrange the order. If there are multiple trunks set as failovers.
7. Click on  to edit, or  to delete the Trunk from Failover list.



Level: _____

Password:

Enable Filter on Source Caller ID

Enable Filter on Source Caller:

ID: _____

Outbound Route CID:

Call Duration Limit

Cell Duration Limit:

Main Trunk

* Trunk:

Strip:

Prepend:

Failover Trunk

TRUNKS	STRIP	PREPEND	OPTIONS
SIP Trunks -- VoIPTrunk	.0		
SIP Trunks -- VoIPTrunk2	.0		

Figure 12: Analog Trunk added as Failover



ACIM AND PSTN DETECTION


UCM6xxx series support ACIM and PSTN detections modules allowing auto-detection and configuration of PSTN lines, this helps getting best parameters to use on PSTN lines avoiding common issues when it comes to use PSTN lines such echo, noise, calls not ended when remote party ends the call.

ACIM Settings

Users may sometimes face audio quality issues like noise, echo, audio volume level and choppy voice issues, this is mostly related to impedance parameters not configured correctly on the FXO ports.

Please follow the below steps to configure ACIM Settings:

1. Go to **PBX Settings**→**Interface Settings**→**Analog Hardware**.

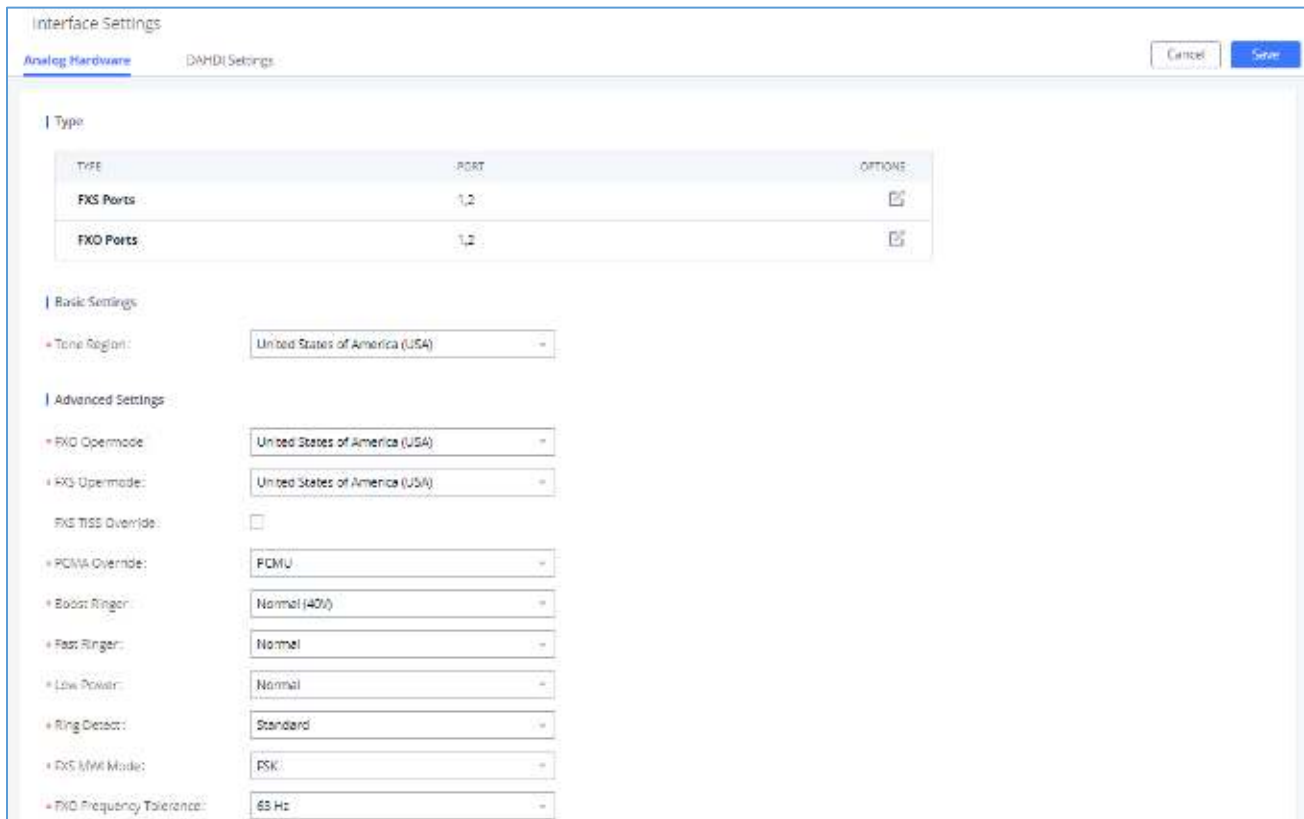

The screenshot shows the 'Interface Settings' window with the 'Analog Hardware' tab selected. It contains a table for port types and a list of settings for FXO ports.

Type	Port	Options
FXS Ports	1,2	
FXO Ports	1,2	

Basic Settings

- Tone Region: United States of America (USA)

Advanced Settings

- FXO Opermode: United States of America (USA)
- FXS Opermode: United States of America (USA)
- FXS TSS Override:
- PCMA Override: PCMU
- Boost Ringer: Normal (40%)
- Fast Ringer: Normal
- Low Power: Normal
- Ring Detect: Standard
- FXS S/MW Mode: FSK
- FXO Frequency Tolerance: 65 Hz

Figure 13: Ports Config Page

2. Users can select their country under **FXO Opermode** to set the On Hook Speed, Ringer Impedance, Ringer Threshold, Current Limiting, TIP/RING voltage adjustment, Minimum Operational Loop Current, and AC Impedance as predefined for your country's analog line characteristics.

Note that different countries often have different standards for impedance. Impedance can also depend on PSTN provider/CO switches and used wires in the same country.

3. Click on  under Options next to FXO Ports.

- Users can manually enter the ACIM settings by selecting the value from dropdown list for each port. Or users could choose the detect option (either ERL or Pr) then click on "**Detect**" to automatically detect the ACIM value. The detecting value will be automatically filled into the settings.

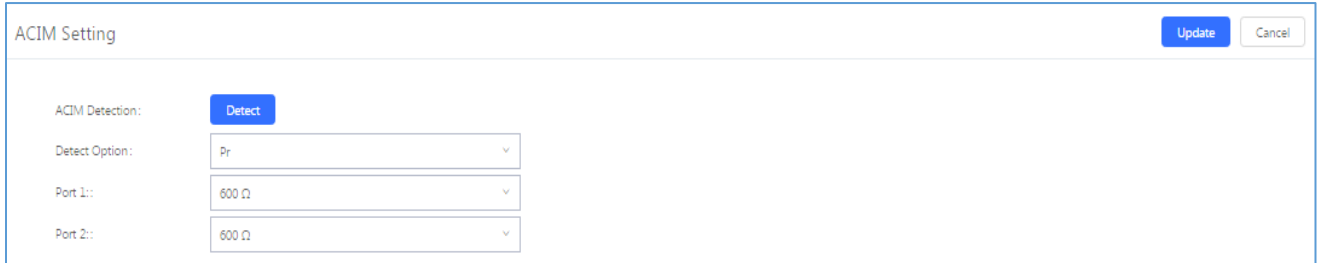


Figure 14: ACIM Settings

- Click "**Update**" to apply the detected ACIM value.

Note: After setting the AC impedance for the connected line to the FXO Port, and notice that audio gains are still low. Users can increase manually Rx/Tx gains for the **Receiving/Transmitting channel** of the analog FXO port. The Rx/Tx audio gains settings can be configured by editing the analog trunk from **PBX→Basic/Call Routes→Analog Trunks**. The valid range is from -13.5 (dB) to +12.0 (dB). The default setting is 0.

PSTN Detection

PSTN Detection module can be used to detect and configure following parameters:

- Busy Tone:** Depending on PSTN providers/countries/analog PBX, a busy tone signal can be used to indicate to other party (UCM6xxx) that the call is ended.
- Polarity Reversal:** Depending on PSTN providers/countries/analog PBX, a polarity reversal signal can be used to indicate to other party (UCM6xxx) that the call is ended.
- Current Disconnect** which is an interruption of line power from the CO switch/PSTN Provider or analog PBX to the FXO port, which last for a specific duration depending on your PSTN provider or Co Switch/PBX

Automatic Detection of PSTN Parameters

The UCM6XXX provides PSTN detection function to help users detect the busy tone, Polarity Reversal and Current Disconnect by making a call from the PSTN line to another destination. The detecting call will be answered and up for about 1 minute. Once finished, results will show and can be used for UCM6xxx settings.

- Edit the analog trunk previously created.
- In "Edit analog trunk" window, go to "**Tone Settings**" section.
Note: **Tone Country** includes a list of countries and their busy and congestion tones. Users can set it to "Custom" and enter their busy and congestion tones if known.
- Click on "**Detect**" to start PSTN detection.



Tone Settings			
Busy Detection:	<input checked="" type="checkbox"/>	* Busy Tone Count:	<input type="text" value="2"/>
Congestion Detection:	<input checked="" type="checkbox"/>	* Congestion Count:	<input type="text" value="2"/>
* Tone Country:	<input type="text" value="United States of America (USA)"/>	* Busy Tone:	<input type="text" value="f1=480@-50,f2=620@-50,c=500/500"/>
* Congestion Tone Settings:	<input type="text" value="f1=480@-50,f2=620@-50,c=250/250"/>	PSTN Detection:	<input type="button" value="Detect"/>

Figure 15: UCM6XXX FXO Tone Settings

- If there are two analog lines connected, **Auto Detect** mode can be used.

Detect Model: Auto Detect.

Source Channel: The source channel to be detected.

Destination Channel: The channel to call during auto detection. For example, the second FXO port.

Destination Number: The number to be dialed for detecting. This number must be the actual PSTN number for the FXO port used as the destination channel.

Dump Call Progress Tone File: Detected Call Progress Tone will be stored on a downloadable file.

PSTN Detection ✕

Detect model:

Source Channel (to be detect...):

Destination Channel:

* Destination Number:

Dump Call Progress Tone File...

Note: Detection will keep the call up for about 1 minute. If you have selected Semi-auto Detect, please pick up the phone only after you are informed.

Figure 16: UCM6XXX PSTN Detection: Auto Detect

- If there is one analog line connected, **Semi-auto Detect** needs to be used.

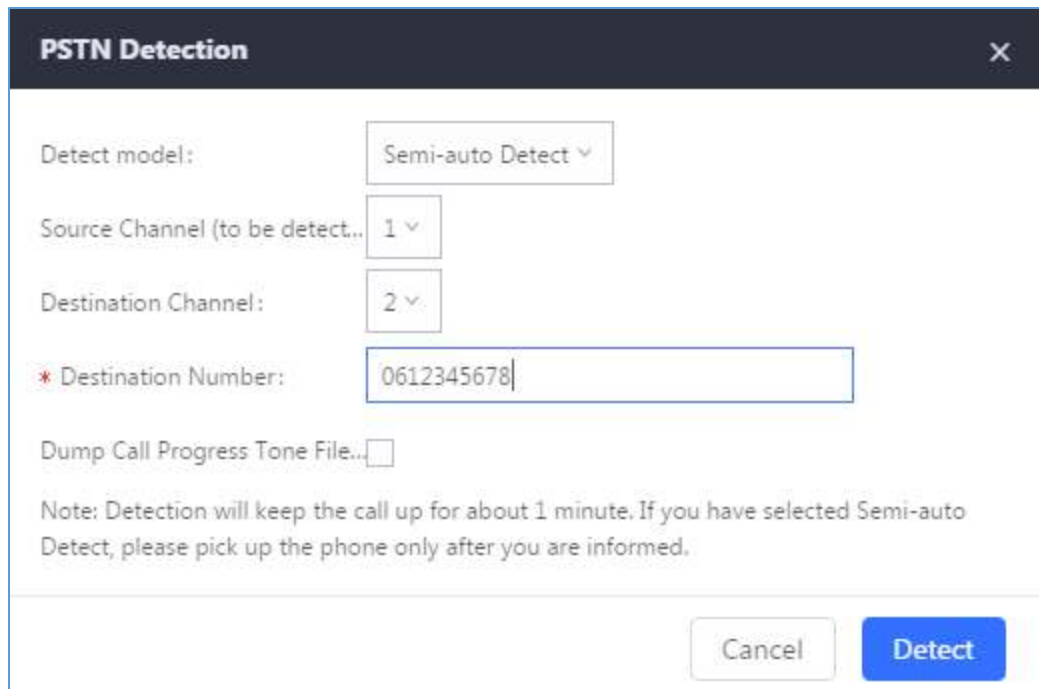


Figure 17: UCM6XXX PSTN Detection: Semi-Auto Detect

Detect Model: Semi-auto Detect.

Source Channel: The source channel to be detected.

Destination Number: The number to be dialed. This number could be a cell phone number or other PSTN number that can be reached from the source channel PSTN number.

Dump Call Progress Tone File: Detected Call Progress Tone will be stored on a downloadable file.

4. Click "**Detect**" to start detecting.

The source channel will initiate a call to the destination number. For "**Auto Detect**", the call will be automatically answered. For "**Semi-auto Detect**", the UCM6XXX web GUI will display prompt to notify the user to answer or hang up the call to finish the detecting process as shown in the below figures

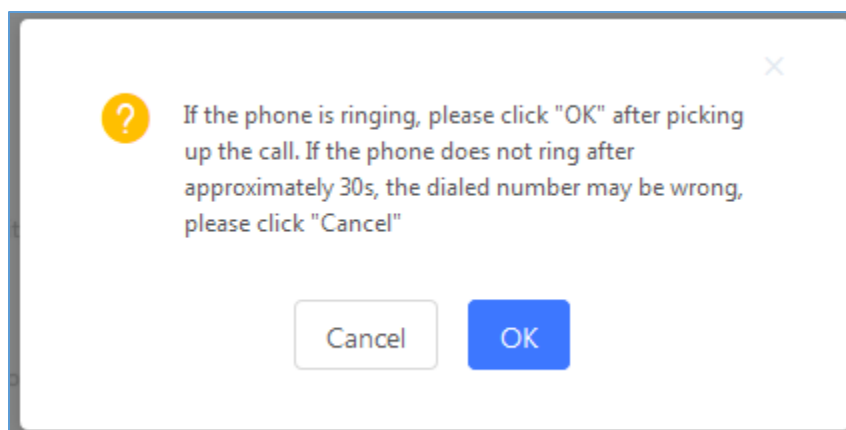


Figure 18: Answering Call Prompt

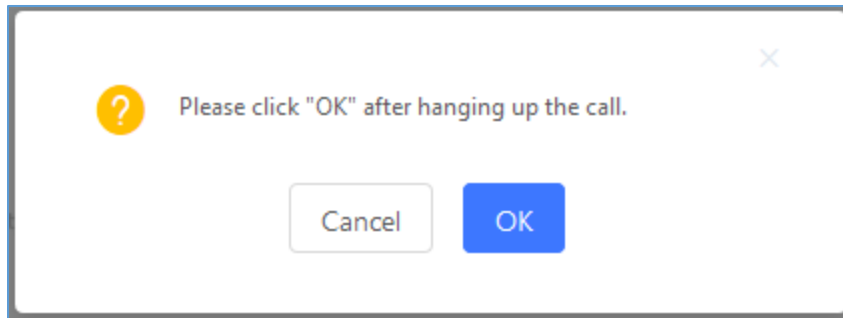


Figure 19: Hangup Call Prompt

5. Once done, detected results will show in “Prompt Information” window. Click on **OK** to Apply changes.

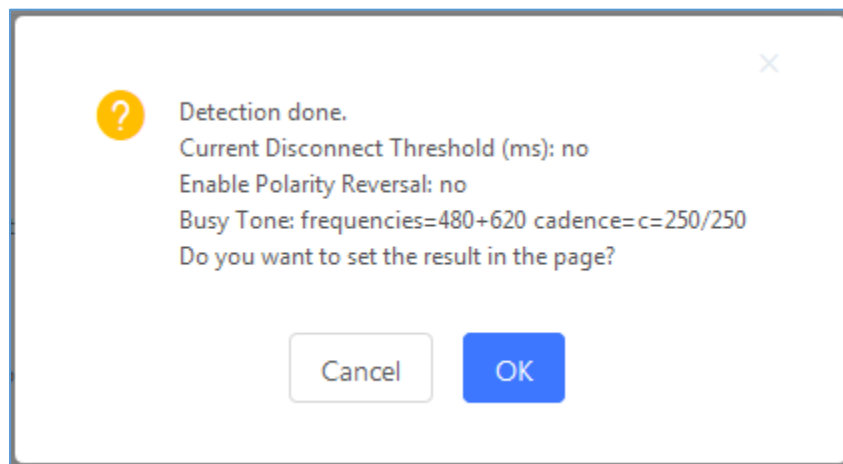


Figure 20: PSTN Parameters Detected

Manual Configuration of PSTN Parameters

If analog line tone parameters are known, customers could configure them on the UCM6xxx manually by setting **Tone Country** option to **Custom** and entering them manually. Same applies for Polarity reversal and Current Disconnect parame

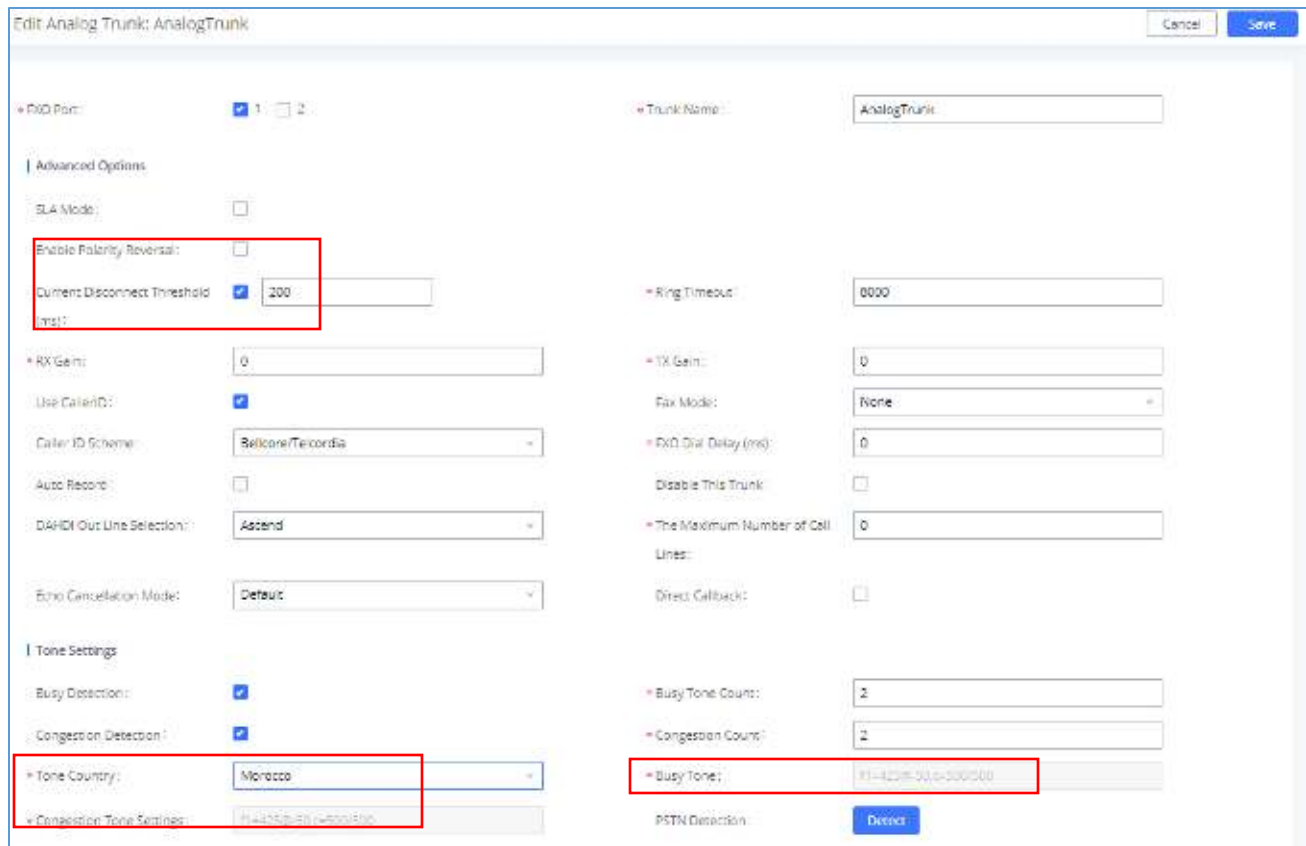


Figure 21: Custom Tone Parameters

Otherwise users can manually capture an analog record trace while using the Analog Trunk, to manually measure the Busy Tone frequencies and Cadence.

Please refer to steps below for capturing an analog trace record, and manually measuring Busy Tone frequencies and cadence:

Step 1: Capture an Analog Record Trace

1. Go to **Maintenance**→**Signaling Troubleshooting**→**Analog Record Trace**.
2. Choose the FXO port used, and click on **Start** to begin the capture.
3. Make a call to FXO port, answer the call and keep it for a few seconds, then Hang-up from analog side.
4. Click on **Stop**, then **Download** to download captured audio file.



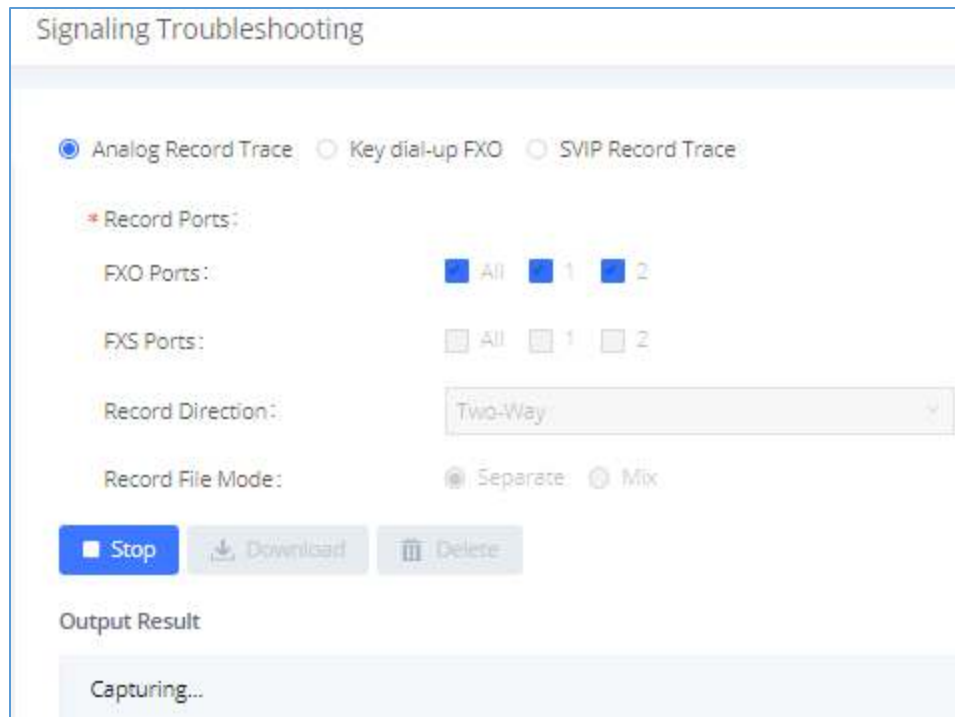


Figure 22: Download Analog Trace

5. Save the Downloaded file to a local folder on your computer, and unzip it.

Note: Users can set **Record Direction** to **Receive** since we will be analyzing received file only.

Another option is available to take analog record using A Key Dial-up FXO:

Users can directly set a PSTN number on the “External Extension” text box to troubleshoot issues related to the analog trunk easily, the following steps shows how to use this feature:

1. Configure analog trunk on UCM, including outbound route.
2. Enter a reachable external number in “External Extension” .
3. Press “Start” button. The call will be initiated to the external number.
4. Answer and finish the call before pressing “Stop” button.
5. The trace will be available for analysis to download after output result shows “Done! Click on Download to download the captured packets” .



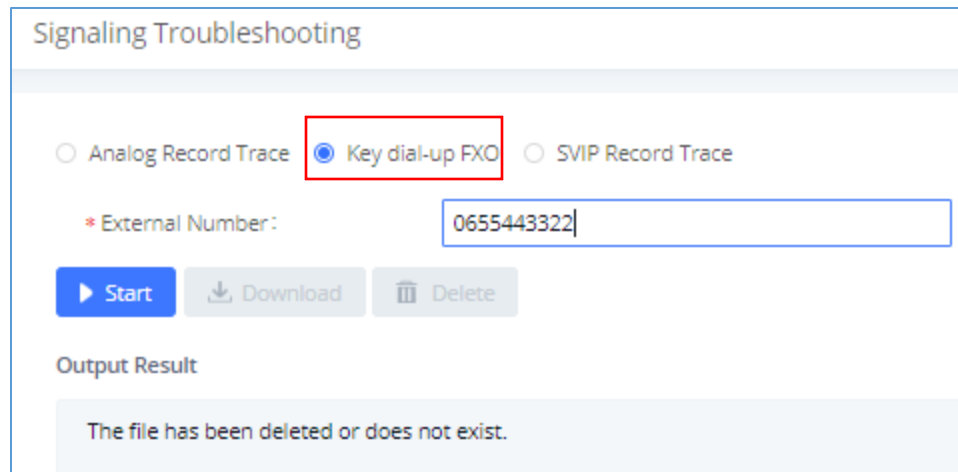


Figure 23: A key dial-up FXO

Note: When using a Key Dial-up FXO feature the outbound trunk for the analog trunk need to have internal permission. As well as it should be the trunk with the highest outbound route priority.

Step 2: Import Raw File to an Audio Analyzer Software

In this step we will be analyzing the Analog Record Trace using Audacity. Users can download it from the following link: <http://www.audacityteam.org/download/>. Similar steps can be applied for any other Audio Analyzer Software.

1. Import RX Raw File to Audacity.

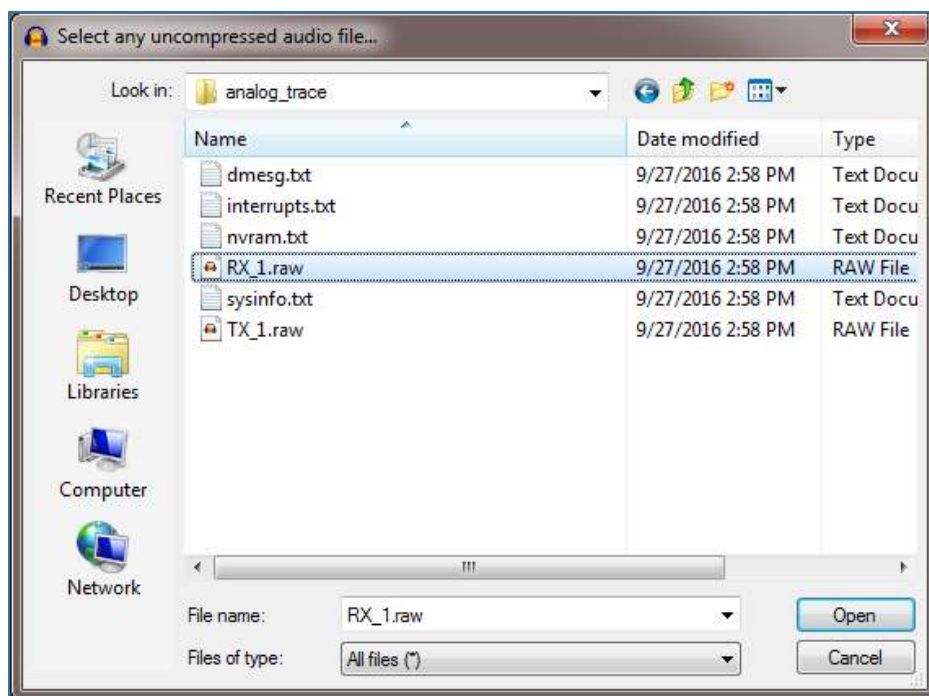


Figure 24: Import Raw File to Audacity

2. Click on Open, and set the following:

- **Encoding** to “Signed 16bit PCM”
- **Byte order** to “No endianness”
- **Channels** to “1 channel (Mono)”
- **Sample rate** to “8000 Hz”

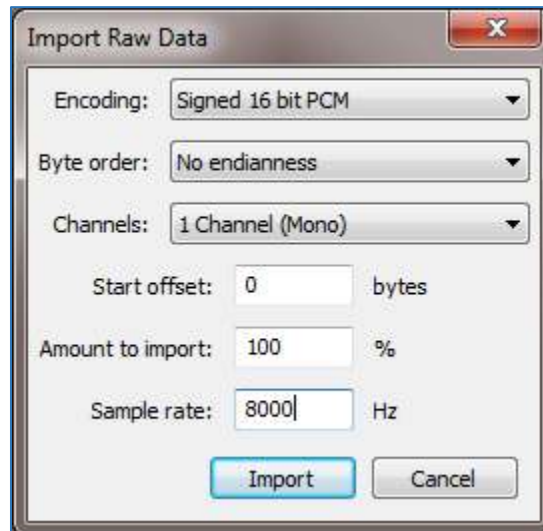


Figure 25: Import Raw Data Parameters

3. The result will be similar to the following figure:



Figure 26: Raw Data Imported

Step 3: Measuring Cadence

Once the RX raw file is successfully imported, we can now measure ringing and silence duration that will corresponds to cadence value (Cadence= Ringing duration/Silence duration).

Below is an example on how to measure silence and tone duration using the imported RX raw file.

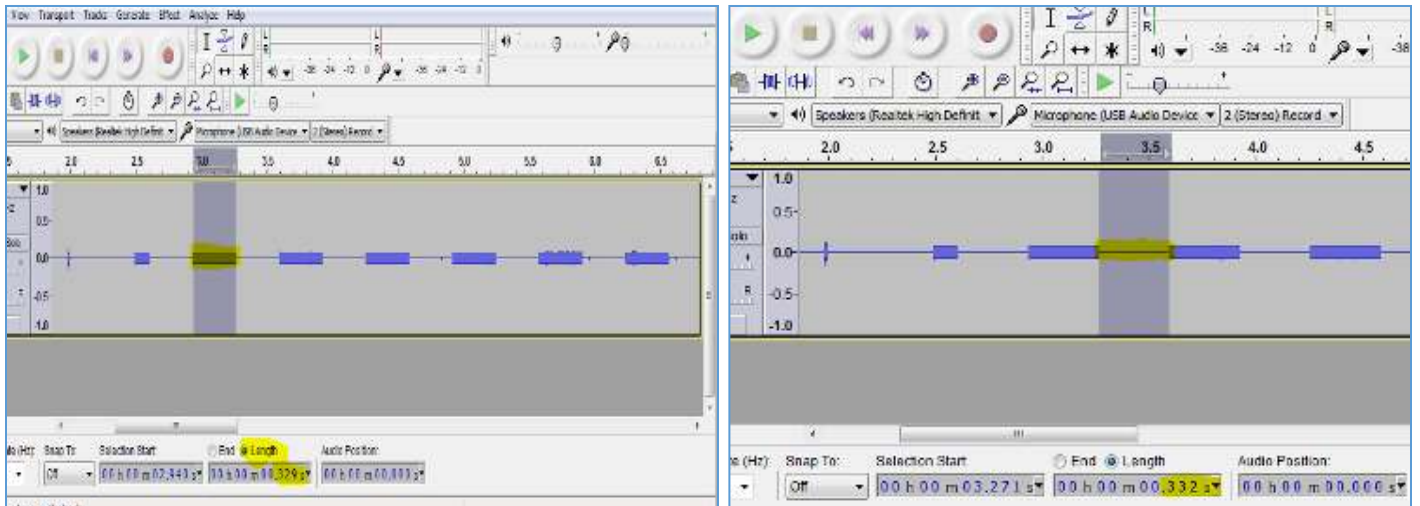


Figure 27: Measuring Cadence

The results are 329ms of ringing and 332 of silence, we will round them both to 330, hence the Cadence duration is $c=330/330$.

Step 4: Measuring Busy Tone Frequencies

1. On Audacity tool bar, go to **Analyze → Plot Spectrum**.
2. Point the mouse cursor on the highest signal to show the Peak Value as shown in the below figure example:

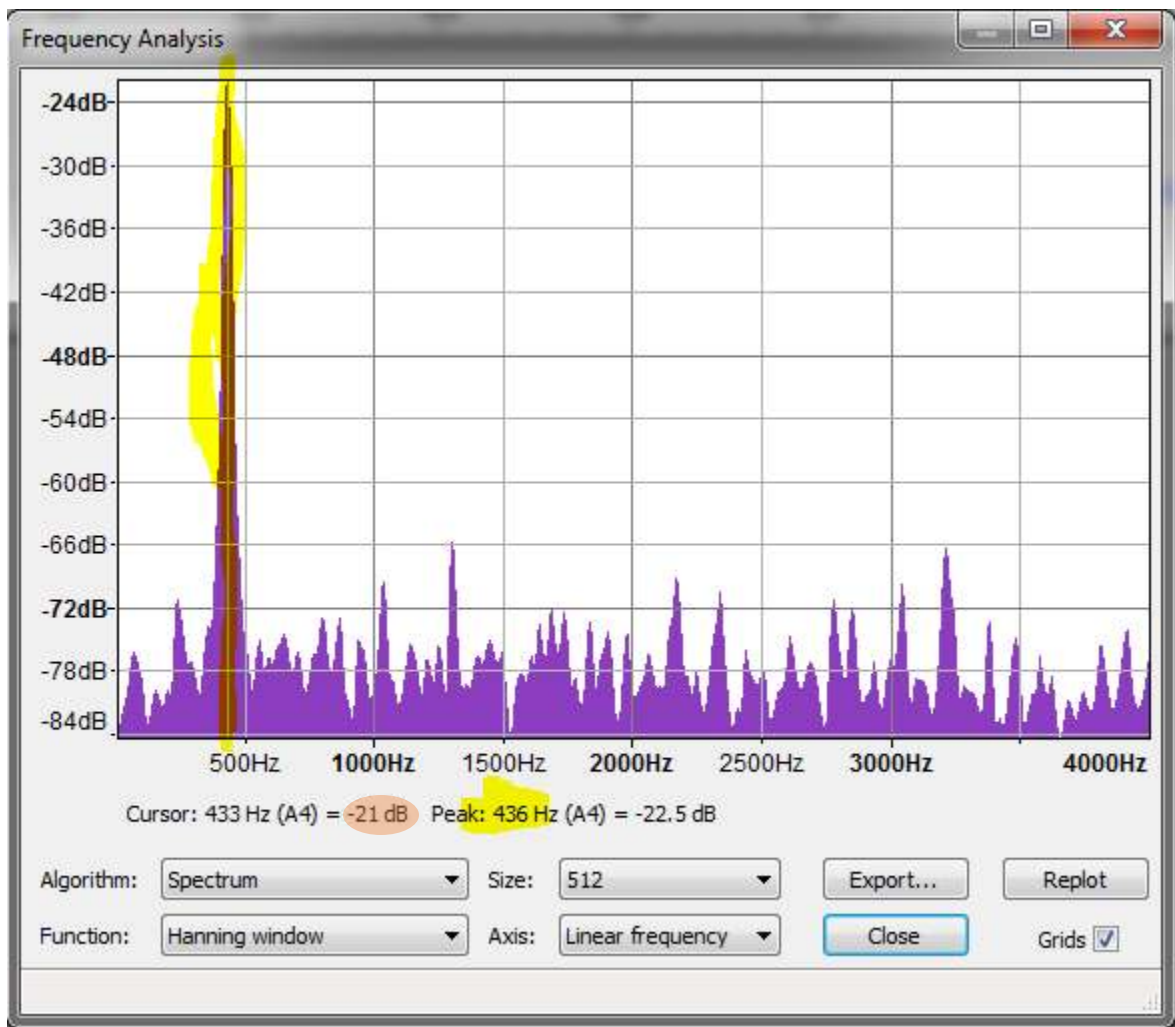


Figure 28: Busy Tone Frequencies

In this example we have only one frequency Peak, hence the Busy tone frequencies are $f_1=436\text{Hz}@-20\text{dB}$ and $f_2=0\text{Hz}@-20\text{dB}$. (We have rounded the attenuation value to -20dB).

MONITORING ANALOG LINES

The UCM6XXX supports SLA (Shared Line Appearance) that allows mapping the key with LED on a multi-line phone to different external lines. When there is an incoming call and the phone starts to ring, the LED on the key will flash in red and the call can be picked up by pressing this key. This allows users to know if the line is occupied or not. The SLA function on the UCM6XXX is similar to BLF but SLA is used to monitor external line i.e., analog trunk on the UCM6XXX. Users could configure the phone with BLF mode on the MPK to monitor the analog trunk status or press the line key pick up call from the analog trunk on the UCM6XXX.

Enabling SLA Mode

1. Enable SLA Mode under the Analog Trunk Parameters.

The screenshot shows the 'Edit Analog Trunk' configuration interface. Under the 'Advanced Options' section, the 'SLA Mode' checkbox is checked and highlighted with a red rectangular box. Below it, the 'Barge Allowed' checkbox is also checked. The 'Hold Access' dropdown menu is set to 'Open'. The 'Trunk Name' field contains 'AnalogTrunk'.

Figure 29: Enable SLA Mode for the Analog Trunk

2. User can check **Barge Allowed** if needed in order to allow barging into a call in progress from SLA stations by pressing the configured line button.
3. Hold Access is used in order to allow any station to make the line on Hold, and any other station can resume it if it is set to **Open**, or restrict only that station that placed the line on hold to resume it by setting the option to **Private**.


Note: SLA mode is supported on trunks with one PSTN line only. When using SLA mode, the trunk will be dedicated to SLA stations for incoming and outgoing calls bypassing configured inbound/outbound routes.

Create/Edit SLA Station

After enabling SLA Mode under the analog Trunk, SLA Station can now be configured on web GUI → **Extension / Trunk** → **SLA Station**.

The screenshot shows the 'SLA Station' configuration page. At the top, there are '+ Add' and 'Delete' buttons. Below is a table with the following columns: Station Name, Station, Associated SLA Trunks, and Options. The table is currently empty and displays 'No Data'.

Figure 30: SLA Station Page

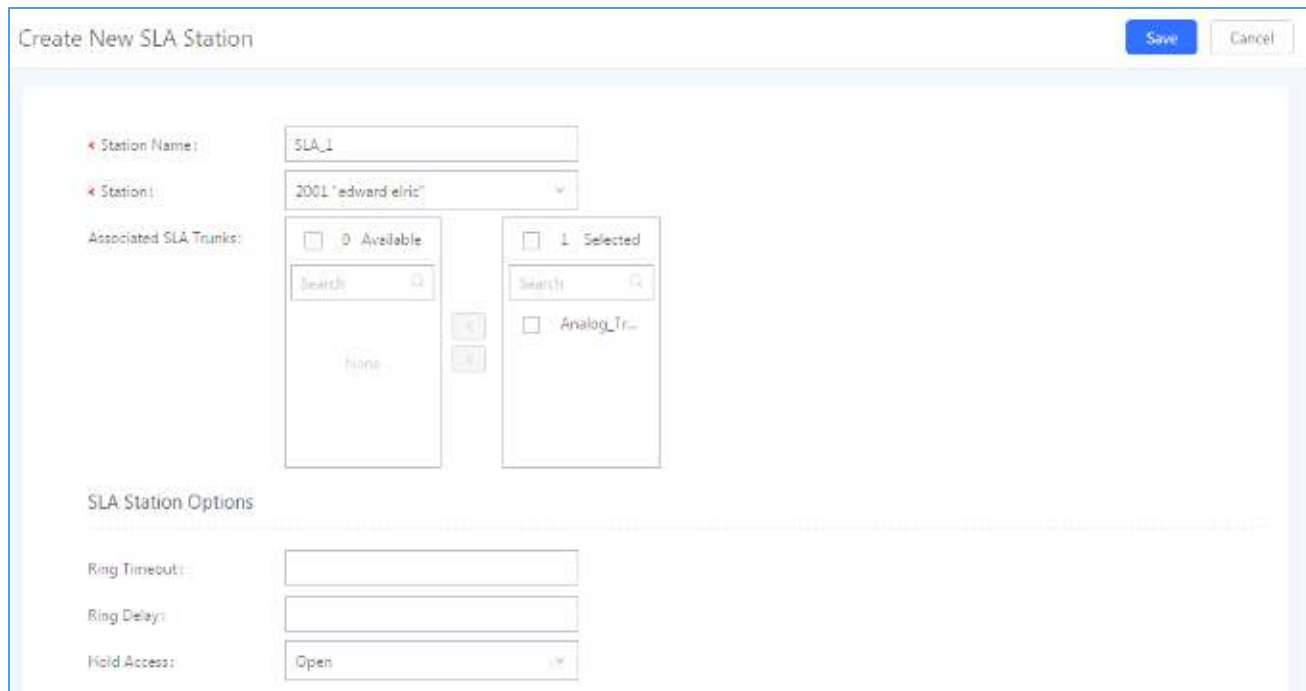

The screenshot shows a web form titled "Create New SLA Station". At the top right are "Save" and "Cancel" buttons. The form contains the following sections:

- Station Name:** A text input field containing "SLA_1".
- Station:** A dropdown menu showing "2001 *edward elric*".
- Associated SLA Trunks:** Two side-by-side lists. The left list is titled "Available" and contains a search bar and the text "None". The right list is titled "Selected" and contains a search bar and a checkbox labeled "Analog Tr...".
- SLA Station Options:** A section with three input fields:
 - Ring Timeout:** An empty text input field.
 - Ring Delay:** An empty text input field.
 - Hold Access:** A dropdown menu with "Open" selected.

Figure 31: Create New SLA Station







- Click on **"Add"** to add an SLA Station.
- Click on  to edit the SLA Station. The following table shows the SLA Station configuration parameters.
- Click on  to delete the SLA Station.


Table 2: SLA Station Configuration Parameters

Station Name	Configure a name to identify the SLA Station.
Station	Specify a SIP extension as a station that will be using SLA.
Associated SLA Trunks	Existing Analog Trunks with SLA Mode enabled will be listed here.
Selected SLA Trunks	Select a trunk for this SLA from the Available SLA Trunks list. Click on     to arrange the order. If there are multiple trunks selected, when there are calls on those trunks at the same time, pressing the LINE key on the phone will pick up the call on the first trunk here.
SLA Station Options	
Ring Timeout	Configure the time (in seconds) to ring the station before the call is considered unanswered. No timeout is set by default. If set to 0, there will be no timeout.
Ring Delay	Configure the time (in seconds) for delay before ringing the station when a call first coming in on the shared line. No delay is set by default. If set to 0, there will be no delay.
Hold Access	This option defines the competence of the hold action for one particular trunk. If set to "open", any station could hold a call on that trunk or resume one held session; if set to "private", only the station that places the trunk call on hold could resume the session. The default setting is "open".



Sample Configuration

1. Go to web UI→**Extension / Trunk**→**Analog Trunks** page. Create or edit the analog trunk. Make sure “**SLA Mode**” is enabled for the analog trunk. Once enabled, this analog trunk will be only available for the SLA stations created under web UI→**Extension / Trunk**→**SLA Station** page.

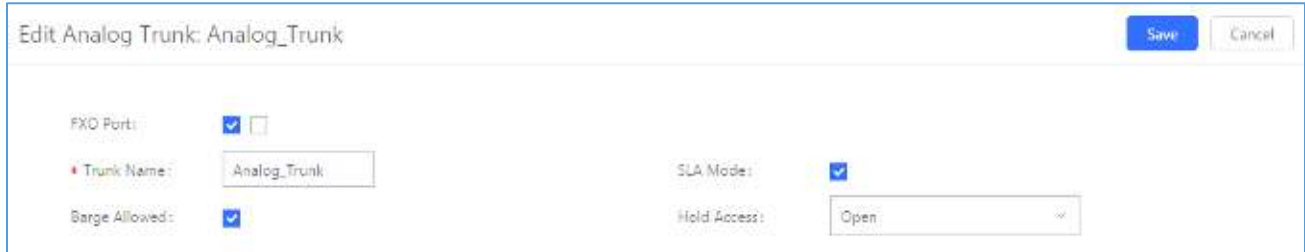


The screenshot shows the 'Edit Analog Trunk' configuration page for 'Analog_Trunk'. The page includes a 'Save' button and a 'Cancel' button. The configuration fields are as follows:

- FXO Ports:
- Trunk Name: Analog_Trunk
- Barge Allowed:
- SLA Mode:
- Hold Access: Open

Figure 32: Enable SLA Mode for Analog Trunk

Click on “**Save**”. The analog trunk will be listed with trunk mode “SLA”.

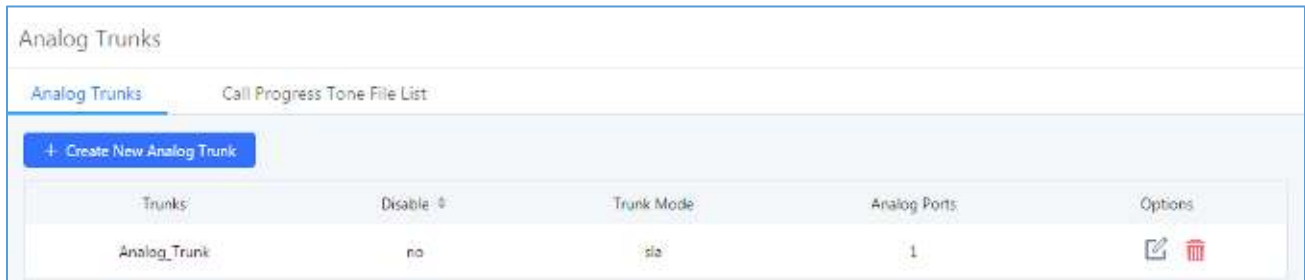

The screenshot shows the 'Analog Trunks' list page. A table lists the configured analog trunks. The 'Analog_Trunk' entry is shown with the following details:




Trunks	Disable	Trunk Mode	Analog Ports	Options
Analog_Trunk	no	sla	1	 

Figure 33: Analog Trunk with SLA Mode Enabled

2. Go to web UI→**Extension / Trunk**→**SLA Station** page, click on “**Add**”. Users can create one or more SLA stations to monitor the analog trunk. The following figure shows two stations, 3000 and 3001 be associated with SLA trunk “Analog_Trunk”.



The screenshot shows the 'SLA Station' list page. A table lists the configured SLA stations. Two stations, SLA_1 and SLA_2, are shown, both associated with the 'Analog_Trunk'.

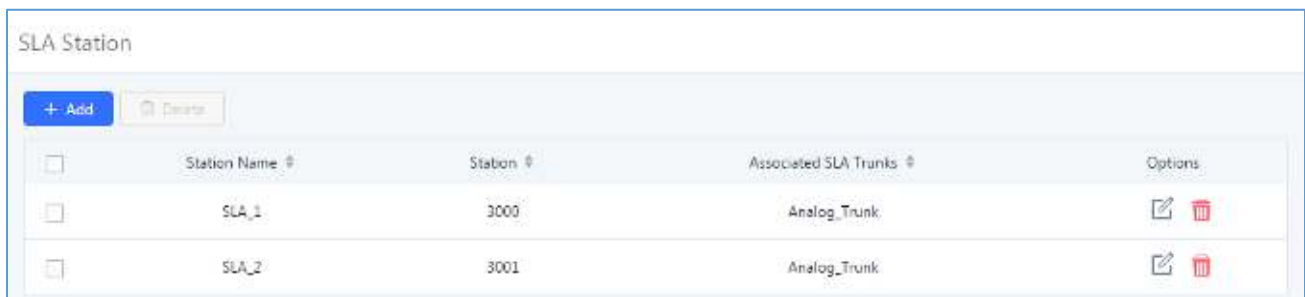



	Station Name	Station	Associated SLA Trunks	Options
<input type="checkbox"/>	SLA_1	3000	Analog_Trunk	 
<input type="checkbox"/>	SLA_2	3001	Analog_Trunk	 

Figure 34: SLA Example - SLA Station

3. On a SIP Phone with extension 3000 or 3001. Configure the MPK as BLF mode and the value must be set to “**Extension_Trunkname**”, which is **3000_Analog_Trunk** or **3001_Analog_Trunk** in our example.



Multi-Purpose Keys				
	Mode	Account	Description	Value
MPK 1	Busy Lamp Field (BLF) ▼	Account 1 ▼	3000_Analog_Trunk	3000_Analog_Trunk

Figure 35: SLA Example - MPK Configuration

Now the SLA station is ready to use. The following functions can be achieved by this configuration:

- **Making an outbound call from the station/extension, using LINE key**
When the extension is in idle state, pressing the line key for this extension on the phone to off hook. Then dial the station's extension number, in our example, dial 3000 or 3001 on the configured Phone to hear the dial tone. Then the users are able to dial external number for the outbound call.
- **Making an outbound call from the station/extension, using BLF key**
When the extension is in idle state, pressing the MPK and users could dial external numbers directly.
- **Answering call using LINE key**
When the station is ringing, pressing the LINE key to answer the incoming call.
- **Barging-in active call using BLF key**
When there is an active call between an SLA station and an external number using the SLA trunk, other SLA stations monitoring the same trunk could join the call by pressing the BLF key if "Barge Allowed" is enabled for the analog trunk.
- **Hold/Resume using BLF key**
If the external line is previously put on hold by an SLA station, another station that monitors the same SLA trunk could resume the call by pressing the BLF key if "Hold Access" is set to "open" on the analog trunk and the SLA station.

