

Grandstream Networks, Inc.

GRP26XX Carrier-Grade IP Phones

DNS SRV Guide



Table of Contents

INTRODUCTION.....	4
DNS-SRV	5
DNS-SRV Format	5
Configuring DNS-SRV On GRP26XX.....	5
DNS-SRV Lookup	7
<i>Registration Process</i>	8
DNS NAPTR/SRV	9
DNS NAPTR/SRV Format	9
DNS NAPTR/SRV Lookup	10
DNS SERVER CONFIGURATION	12



Table of Figures

Figure 1: DNS Interaction.....	4
Figure 2: GRP2614 SIP Configuration	6
Figure 3: Network Settings.....	6
Figure 4: Registration Process.....	8
Figure 5: SRV Lookup	8
Figure 6: Network Settings 2.....	10
Figure 7: DNS NAPTR/SRV Lookup.....	11
Figure 8: Configure Records	12
Figure 9: New Zone.....	13
Figure 10: Forward Zone.....	13
Figure 11: Zone Name	14
Figure 12: New NAPTR Record	14
Figure 13: NAPTR Record	15
Figure 14: New SRV Record.....	15
Figure 15: SRV Record	16
Figure 16: New A Record	16
Figure 17: A Record	17
Figure 18: Save Settings.....	17

Table of Tables

Table 1: DNS-SRV Fields Description.....	5
Table 2: Phone DNS Settings.....	7
Table 3: DNS-NAPTR/SRV Fields Description	9



INTRODUCTION

SRV records (Service records) are names in DNS (Domain Name System) allowing to locate servers for specific service, by providing hostname, port number, weight and priority information in response to a DNS lookup request.

DNS SRV can be used to discover the SIP server domain, in order to get registered to make and receive calls and can be also used to identify a backup SIP server domain in the event the primary server fails, providing high availability with no service interruption.

A SIP client configured with a domain name as SIP server (example: grandstream.com), if DNS lookup is using "A Record", the response from the DNS server will include a single IP address for this domain. While if this domain offers different servers for the same service (SIP), DNS SRV can help to provide hostnames, port number, weight and priority for each server, allowing SIP client to connect to the first available server (depending on priority and weight). In addition, Grandstream products support DNS SRV/NAPTR, NAPTR records are used in conjunction with SRV records to discover available services (SIP, email, web, FTP...) in a specific domain, and provide DNS SRV records as response to use for DNS lookup.

The following flow shows DNS interaction between Grandstream products and DNS server:

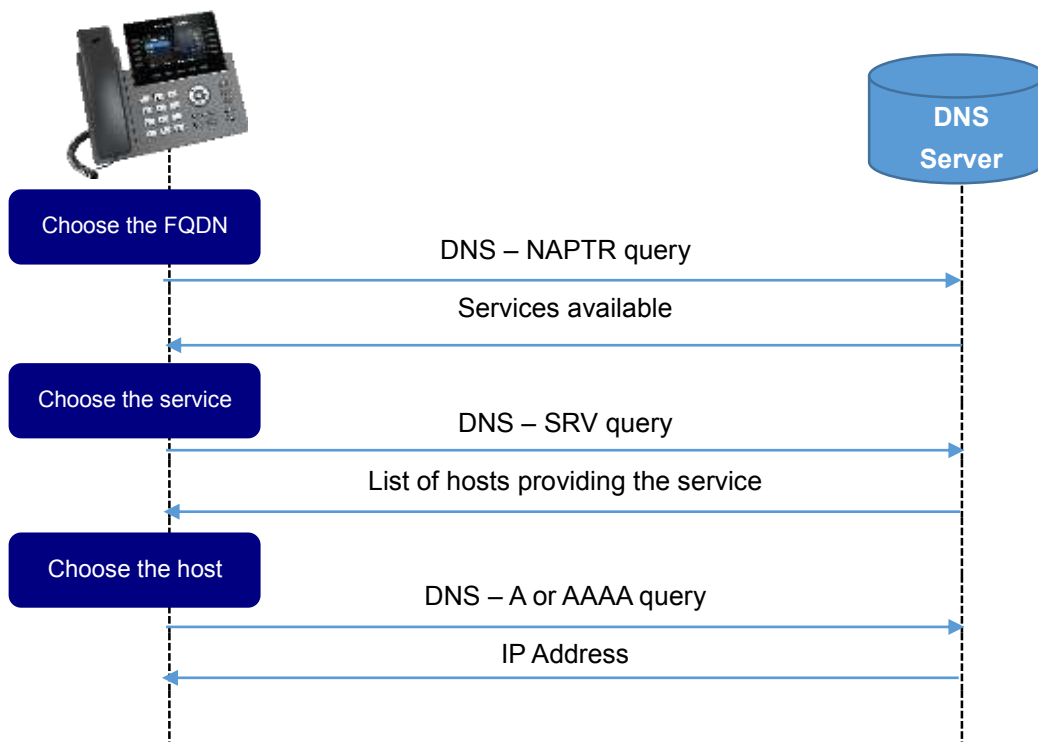


Figure 1: DNS Interaction

DNS-SRV

DNS-SRV Format

The format for a DNS SRV lookup is the following:

_Service._Proto.Name TTL Class SRV Priority Weight Port Target

Table 1: DNS-SRV Fields Description

Fields	Description
Service	The name of the service to resolve (http, sip, ldap...).
Protocol	The protocol used by this service (udp or tcp).
Name	The domain name of the wanted service
TTL	The time interval that the resource record may be cached before the source of the information should again be consulted.
Class	Specify the type of the Resource record it can be: • IN: The Internet class • CS: The CSNET class (Obsolete - used only for examples in some obsolete RFCs) • CH: The CHAOS class • HS: Hesiod [Dyer 87]
Priority	A client attempt to contact the target host with the lowest-numbered priority it can reach, target hosts with the same priority will be tried in an order defined by the weight field. The range is 0-65535
Weight	It specifies a relative weight for entries with the same priority. Larger weight will get high priority of being selected. The range of this number is 0-65535.
Port	The port on this target host of this service. The range is 0-65535.
Target	The domain name of the target host. This entry should return one or more address records for this name.

Configuring DNS-SRV On GRP26XX

GRP2614 is used in this guide as example for the configuration.

1. Enter account credentials under **"Accounts → Account X → General Settings"**.
 In this example: "SIP Server" is "grandstream.com" and "Outbound proxy" is "test.grandstream.com".



General Settings

Account Active	☐ No ☒ Yes
Account Name	2002
SIP Server	grandstream.com
Secondary SIP Server	
Outbound Proxy	test.grandstream.com
Backup Outbound Proxy	
BLF Server	
SIP User ID	2002
Authenticate ID	2002
Authenticate Password	
Name	2002
Voice Mail Access Number	
Picture	Select
Account Display	☒ User Name ☐ User ID

Figure 2: GRP2614 SIP Configuration

- Set "DNS Mode" to "SRV" under "**Accounts → Account X → Network Settings**"

Network Settings

DNS Mode	SRV
DNS SRV Fail-over Mode	Default
Primary IP	
Backup IP 1	
Backup IP 2	
NAT Traversal	No
Proxy-Require	
Use SBC	☒ No ☐ Yes

Figure 3: Network Settings

The table below explains available options related to DNS configuration:

Table 2: Phone DNS Settings

Field	Description
DNS Mode	This parameter controls how the search appliance looks up IP addresses for hostnames. There are four modes: A Record, SRV, NAPTR/SRV, Use Configured IP. The default setting is "A Record". If the user wishes to locate the server by DNS SRV, the user may select "SRV" or "NAPTR/SRV". If "Use Configured IP" is selected, please fill in the three fields below: • Primary IP. • Backup IP 1. • Backup IP 2. If SIP server is configured as domain name, phone will not send DNS query, but use "Primary IP" or "Backup IP x" to send SIP message if at least one of them are not empty. Phone will try to use "Primary IP" first. After 3 tries without any response, it will switch to "Backup IP x", and then it will switch back to "Primary IP" after 3 re-tries. If SIP server is already an IP address, phone will use it directly even "User Configured IP" is selected.
DNS SRV Fail-over Mode	The option will decide which IP is going to be used in sending SIP packets after IPs for SIP server host are resolved with DNS SRV. • Default If the option is set with "default", it will again try to send register messages to one IP at a time, and the process repeats. • Saved one until DNS TTL If the option is set with "Saved one until DNS TTL", it will send register messages to the previously registered IP first. If no response, it will try to send one at a time for each IP. This behavior lasts as long as DNS TTL (time-to-live) is up. • Saved one until no responses If the option is set with "Saved one until no responses", it will send register messages to the previously registered IP first, but this behavior will persist until the registered server does not respond.

DNS-SRV Lookup

In order to Register account in the above example, the phone will try to resolve the domain "**test.grandstream.com**", therefore:

- The phone will send a SRV lookup for "**test.grandstream.com**".
- The DNS server will reply with a list of FQDN's with different weight and priorities.
- The phone will issue an A record query for all the FQDNs (Fully qualifies domain names) starting from the one with the lowest priority number.
- The DNS server will send back the IP addresses associated with those FQDNs.
- The phone will then send SIP REGISTER request to the IP address associated with the lowest priority number returned by the SRV lookup.



Registration Process

If the primary SIP server where the phone is registered (192.168.10.13) fails, the phone act as follow:

- After the register expiration, the phone will send 3 SIP REGISTER requests to the primary server, and won't get a reply.
- The phone will consider the server not available and then send a REGISTER request to the backup server (192.168.10.12).

No.	Time	Source	Destination	Protocol	Info
153	5.711	192.168.10.10	192.168.10.13	SIP	Request: REGISTER sip:grandstream.com (1 binding)
154	5.767	192.168.10.13	192.168.10.10	SIP	Status: 200 OK (1 binding)
955	51.844	192.168.10.10	192.168.10.13	SIP	Request: REGISTER sip:grandstream.com (1 binding)
970	52.343	192.168.10.10	192.168.10.13	SIP	Request: REGISTER sip:grandstream.com (1 binding)
990	53.344	192.168.10.10	192.168.10.13	SIP	Request: REGISTER sip:grandstream.com (1 binding)
1010	55.349	192.168.10.10	192.168.10.12	SIP	Request: REGISTER sip:grandstream.com (1 binding)
1013	55.366	192.168.10.12	192.168.10.10	SIP	Status: 401 Unauthorized
1014	55.372	192.168.10.10	192.168.10.12	SIP	Request: REGISTER sip:grandstream.com (1 binding)
1015	55.390	192.168.10.12	192.168.10.10	SIP	Status: 200 OK (1 binding)

Figure 4: Registration Process

Once the primary server returns to normal, after the register expiration the phone will send again REGISTER request to the primary server.

Note: The same REGISTER process is applied for INVITE and BYE messages.

No.	Time	Source	Destination	Protocol	Length	Info
238	51.27	192.168.10.11	192.168.10.10	DNS	90	Standard query 0x0008 SRV _sip._udp.test.grandstream.com
241	51.27	192.168.10.10	192.168.10.11	DNS	241	Standard query response 0x0008 SRV 2 1 5060 test1.grandstream.com SRV 1 1 5060 test2.grandstream.com
242	51.28	192.168.10.11	192.168.10.10	DNS	81	Standard query 0x0009 A test2.grandstream.com
243	51.28	192.168.10.10	192.168.10.11	DNS	122	Standard query response 0x0009 A 192.168.10.13
244	51.29	192.168.10.11	192.168.10.10	DNS	81	Standard query 0x000a A test1.grandstream.com
245	51.29	192.168.10.10	192.168.10.11	DNS	122	Standard query response 0x000a A 192.168.10.12

_sip._udp.test.grandstream.com: type SRV, class IN	
Answers	
_sip._udp.test.grandstream.com: type SRV, class IN, priority 2, weight 1, port 5060, target test1.grandstream.com Service: _sip Protocol: _udp Name: test.grandstream.com Type: SRV (Server Selection) (33) Class: IN (0x0001) Time to live: 3 Data length: 29 Priority: 2 Weight: 1 Port: 5060 Target: test1.grandstream.com	
_sip._udp.test.grandstream.com: type SRV, class IN, priority 1, weight 1, port 5060, target test2.grandstream.com Service: _sip Protocol: _udp Name: test.grandstream.com Type: SRV (Server Selection) (33) Class: IN (0x0001) Time to live: 3 Data length: 29 Priority: 1 Weight: 1 Port: 5060 Target: test2.grandstream.com	
Authoritative nameservers	
grandstream.com: type NS, class IN, ns elmrabet-pc	
Additional records	
test1.grandstream.com: type A, class IN, addr 192.168.10.12	
test2.grandstream.com: type A, class IN, addr 192.168.10.13	

Figure 5: SRV Lookup

DNS NAPTR/SRV

DNS NAPTR/SRV Format

NAPTR resource records are used to replace compact, regular expressions with a replacement field that may well be a pointer to another rule, its DNS-type code is 35.

The format of an NAPTR record is as follows:

Domain TTL Class Type Order Preference Flags Service Regexp
Replacement

Table 3: DNS-NAPTR/SRV Fields Description

Fields	Description
Domain	The domain name to which this resource record refers
TTL	Specify the time interval that the resource record may be cached before the source of the information should again be consulted.
Class	Specify the type of the Resource record it can be: • IN: The Internet class • CS: The CSNET class (Obsolete - used only for examples in some obsolete RFCs) • CH: The CHAOS class • HS: Hesiod [Dyer 87]
Type	DNS type code for NAPTR is 35
Order	Specify the order in which the NAPTR records need to be processed, low numbers are processed before high numbers.
Preference	Specifies the order in which NAPTR records with the same "Order" values need to be processed. records are processed from lower preference numbers to higher preference numbers.
Flags	Indicate what happens next after this lookup, at this time 4 flags are defined. • The "S" flag indicates that the next lookup should be an SRV lookup. • The "A" flag indicates that the next step is a DNS A, AAAA, A6 record lookup. • The "U" flag means that the next step is not a DNS lookup but that the output of the Regexp field is an URI that adheres to the 'absoluteURI'. • The "P" flag indicates that the remainder of the lookup are defined by the application that uses the NAPTR.
Service	Specifies the services available in this domain. The replacement field is used to get to this service. It can also specify the protocol used to communicate with the



	server that offers this service. In SIP, three services are defined along with their resolution services (resolution services are defined after the “+” sign): • “SIPS+D2T”: Secure SIP, TLS over TCP. • “SIP+D2T”: SIP over TCP. • “SIPS+D2S”: Secure SIP, TLS over SCTP. • “SIP+D2S”: SIP over SCTP. • “SIP+D2U”:SIP over UDP.
Regexp	Carries a substitution expression that is applied to the original domain name in order to construct a new domain name for the next lookup.
Replacement	The next name used to query a DNS. This could be another NAPTR, SRV or A record. In SIP the replacement fields are SRV RRs and hence the flag field is set to “S”.

DNS NAPTR/SRV Lookup

Using the GRP2614 for example the DNS settings can be found under “**Accounts → Account X → Network Settings**”.

Network Settings

DNS Mode

NAPTR/SRV ▼

DNS SRV Fail-over Mode

Default ▼

Primary IP

Backup IP 1

Backup IP 2

NAT Traversal

No ▼

Proxy-Require

Use SBC

☒ No
 ☐ Yes

Save

Save and Apply

Reset

Figure 6: Network Settings 2



Using the example in Figure 1, in order to register the account, the phone will make the following lookup:

- The phone will send a NAPTR lookup for the domain “test.grandstream.com”.
- The server will return back a NAPTR record reply that contain the next step for the lookup.
- The phone will send an SRV lookup for using parameters returned on the NAPTR record.
- The DNS server will reply with a list of FQDN’s with different weight and priorities.
- The phone will issue an A record query for all the FQDNs starting from the one with the lowest priority number.
- The DNS server will send back the IP addresses associated with those FQDNs.
- The phone will then send SIP REGISTER request to the IP address associated with the lowest priority number returned by the SRV lookup.

No.	Time	Source	Destination	Protocol	Length	Info
254	16.08	192.168.10.11	192.168.10.10	DNS	80	Standard query 0x0140 NAPTR test.grandstream.com
255	16.08	192.168.10.10	192.168.10.11	DNS	164	Standard query response 0x0140 NAPTR 80 60 s
256	16.10	192.168.10.11	192.168.10.10	DNS	90	Standard query 0x0141 SRV _sip._udp.test.grandstream.com
257	16.10	192.168.10.10	192.168.10.11	DNS	241	Standard query response 0x0141 SRV 2 1 5060 test1.grandstream.com SRV 1 1 5060 test2.grandstream.com
258	16.10	192.168.10.11	192.168.10.10	DNS	81	Standard query 0x0142 A test2.grandstream.com
259	16.10	192.168.10.10	192.168.10.11	DNS	122	Standard query response 0x0142 A 192.168.10.13
260	16.11	192.168.10.11	192.168.10.10	DNS	81	Standard query 0x0143 A test1.grandstream.com
261	16.11	192.168.10.10	192.168.10.11	DNS	122	Standard query response 0x0143 A 192.168.10.12

[Request In: 254]

[Time: 0.000679000 seconds]

Transaction ID: 0x0140

Flags: 0x8580 Standard query response, No error

Questions: 1

Answer RRs: 1

Authority RRs: 1

Additional RRs: 0

Queries

test.grandstream.com: type NAPTR, class IN

Answers

test.grandstream.com: type NAPTR, class IN, order 80, preference 60, flags s

Name: test.grandstream.com

Type: NAPTR (Naming Authority Pointer) (35)

Class: IN (0x0001)

Time to live: 3

Data length: 47

Order: 80

Preference: 60

Flags Length: 1

Flags: s

Service Length: 7

Service: SIP+D2U

Regex Length: 0

Regex:

[Replacement Length: 32]

Replacement: _sip._udp.test.grandstream.com

Authoritative nameservers

grandstream.com: type NS, class IN, ns elmrabet-pc

Figure 7: DNS NAPTR/SRV Lookup

Note: The registration process is the same as described previously on SRV section.

DNS SERVER CONFIGURATION

A trial Version of **Simple DNS Plus** is used as DNS server in this example.

In order to configure Simple DNS with SRV and NAPTR records please follow those steps:

1. Download and install Simple DNS plus from this link: [SimpleDNSPlus](#).
2. Open Simple DNS Plus and Click on Records to start configuration.

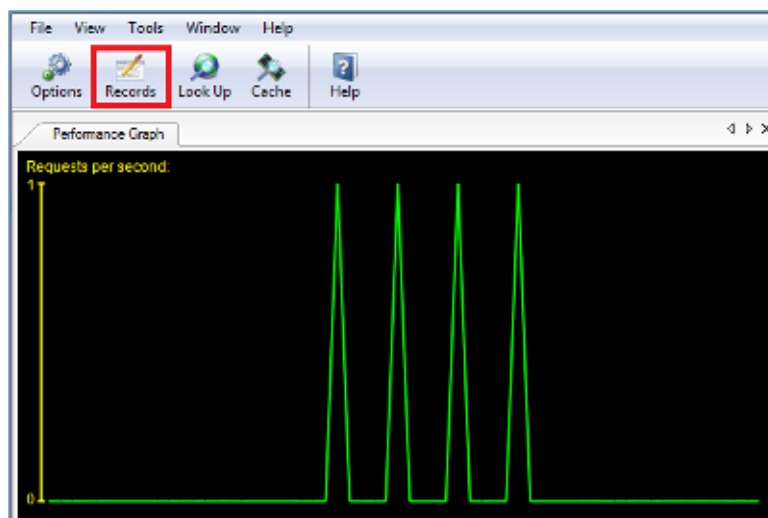


Figure 8: Configure Records

3. Create a new Primary Zone.



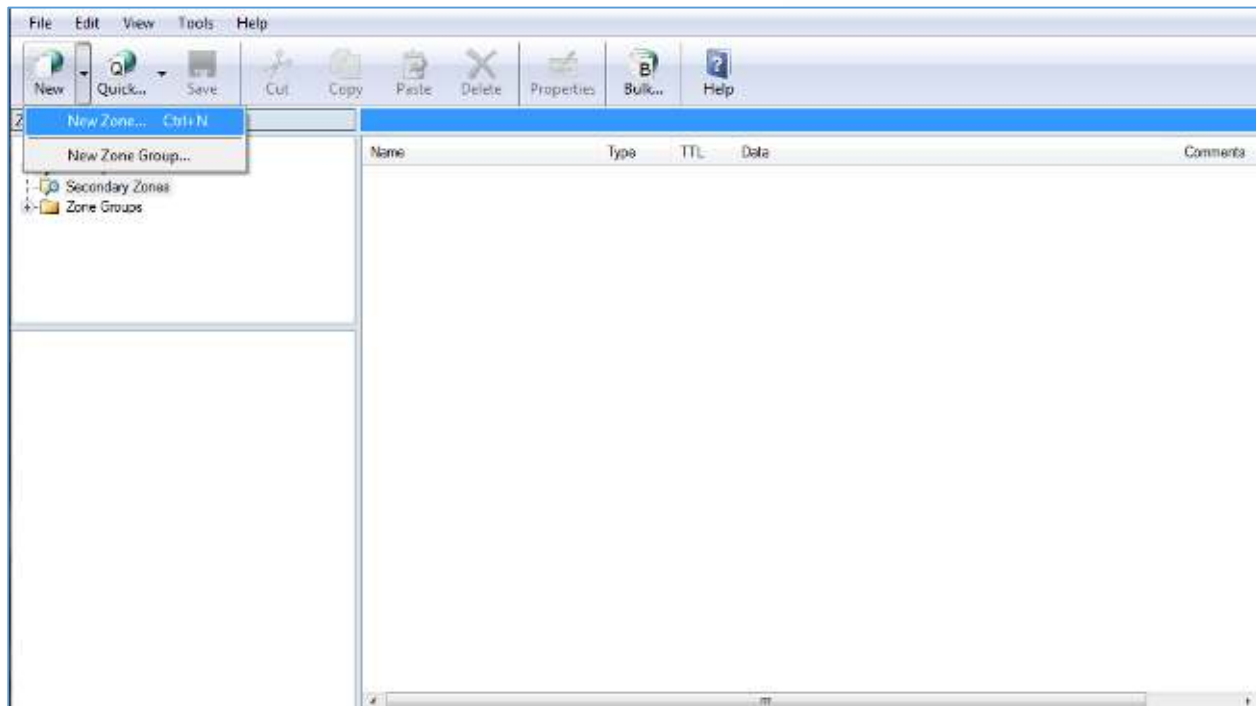


Figure 9: New Zone

4. The following window will be prompt, select Forward Zone and Click “Next”.


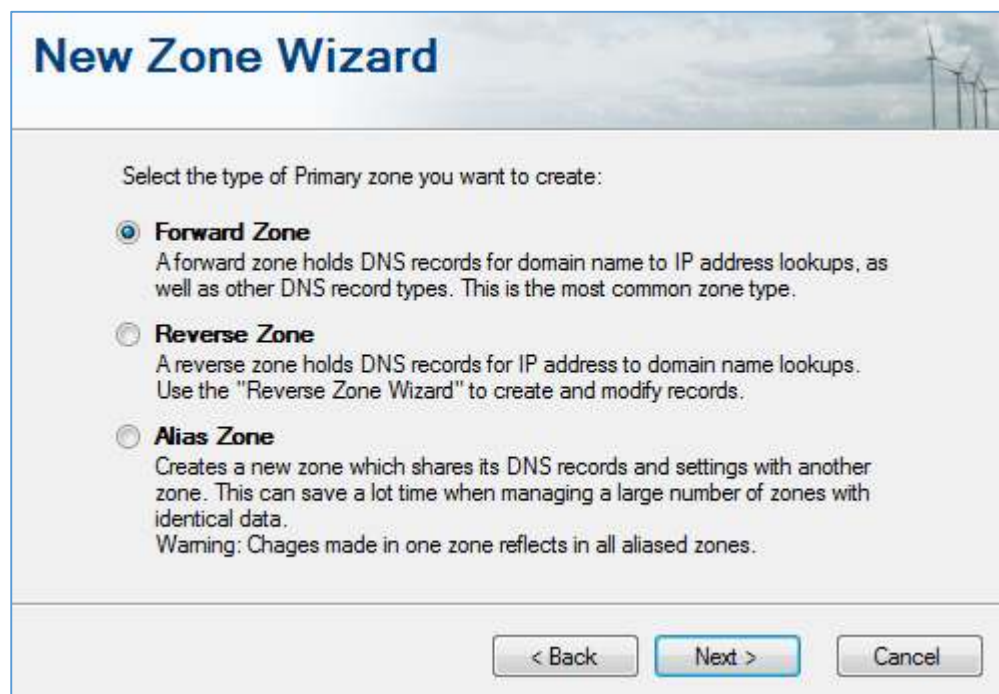


Figure 10: Forward Zone

5. Enter the name of your zone which is “**grandstream.com**” in this example, then click on “Finish”.



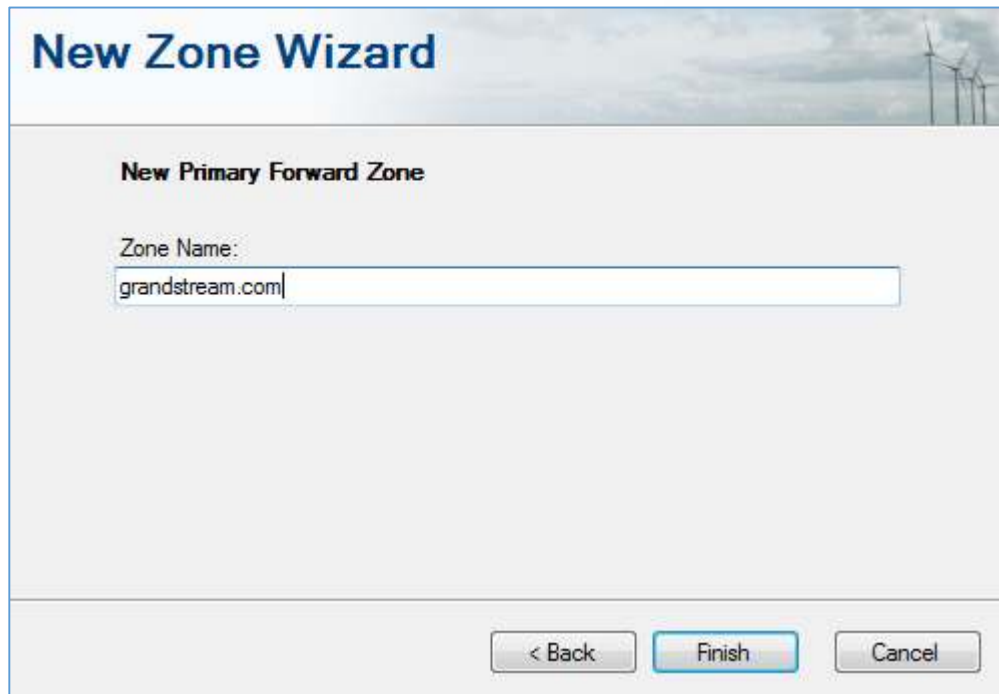

New Zone Wizard

New Primary Forward Zone

Zone Name:

Figure 11: Zone Name

Once the zone is created successfully, start creating the records as shown in the following figure:

6. Right Click on the zone created which is “grandstream.com” then select “**Other New Records**” and click on “**NAPTR-record**”, this will create our NAPTR record.


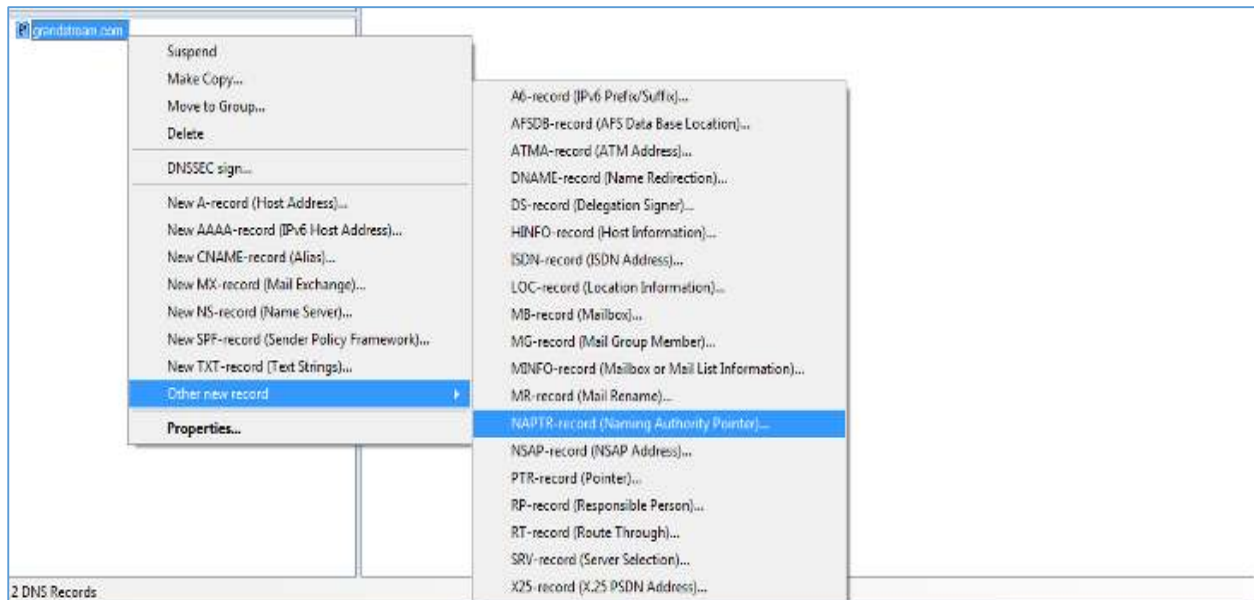


Figure 12: New NAPTR Record

7. Fill the information related to the NAPTR record and click “OK” as shown below.

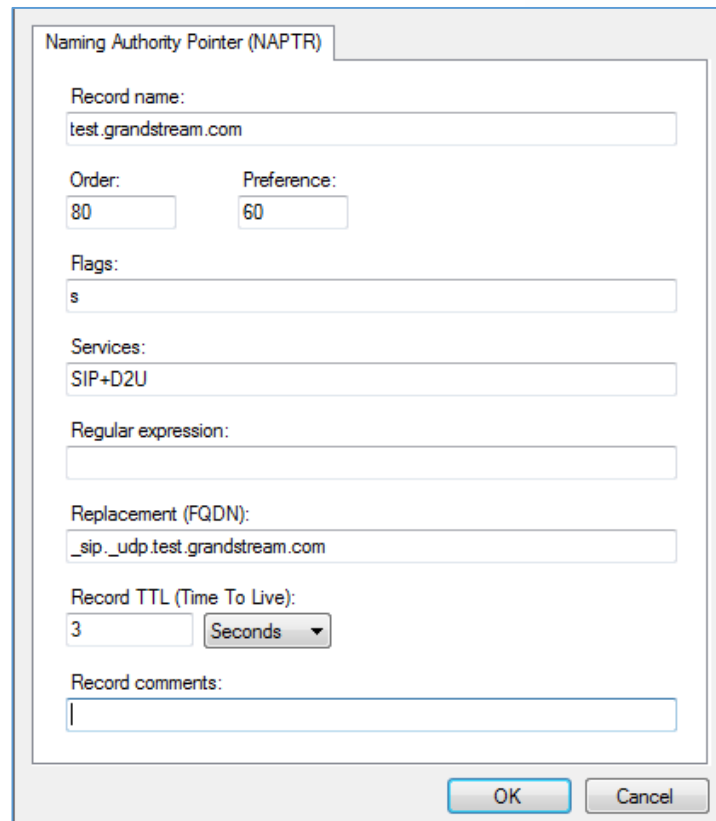

Naming Authority Pointer (NAPTR)

Record name:
test.grandstream.com

Order: 80 Preference: 60

Flags:
s

Services:
SIP+D2U

Regular expression:

Replacement (FQDN):
_sip._udp.test.grandstream.com

Record TTL (Time To Live):
3 Seconds

Record comments:

OK Cancel

Figure 13: NAPTR Record

8. Create SRV records by clicking on “grandstream.com” zone, then select “Other New Records” and click on “SRV-record”, this will create our NAPTR record.

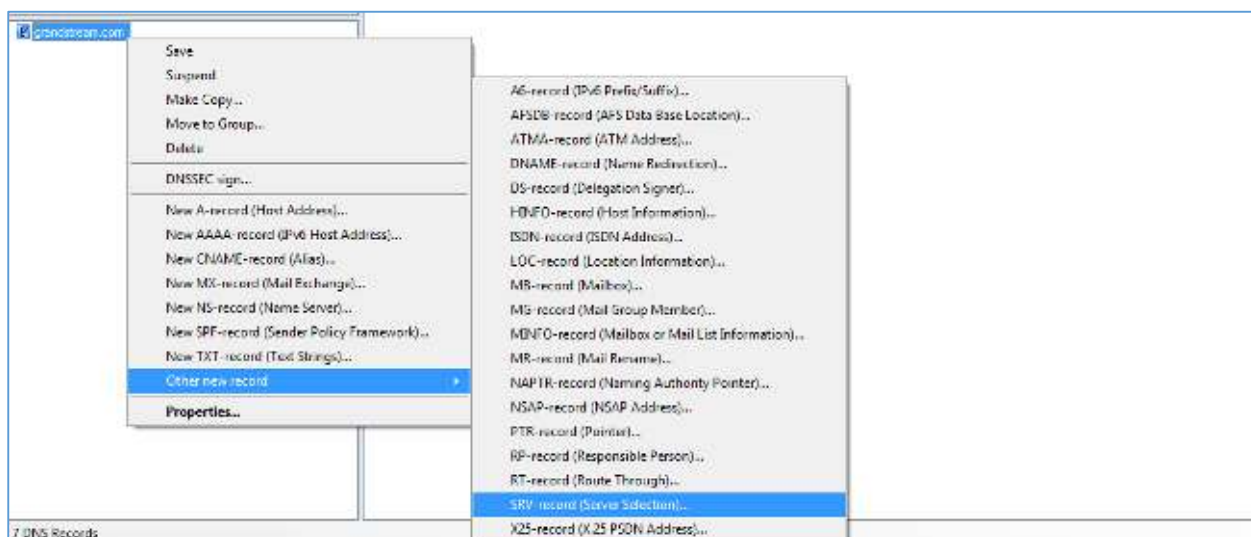


Figure 14: New SRV Record

9. Fill the information related to the SRV record and click “OK” as shown below.

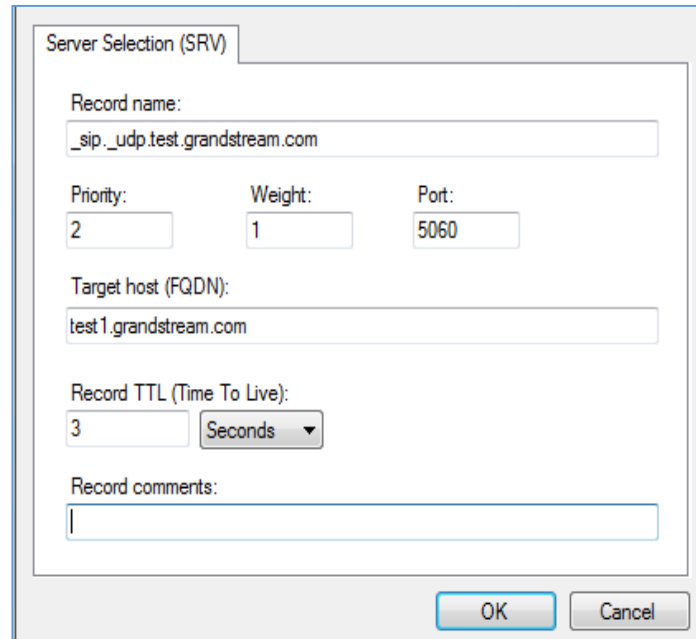


Figure 15: SRV Record

10. Click on “grandstream.com” zone to Create SRV records, then select “Other New Records” and select “SRV-record”, this will create our NAPTR record.

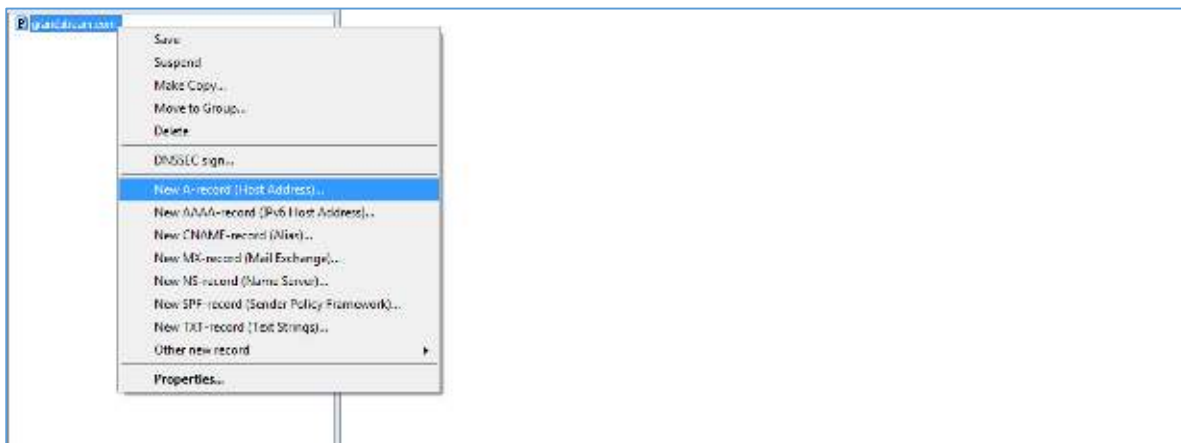


Figure 16: New A Record

11. Fill the information related to the A record and click “OK” as shown below.



Host Address (A)

Record name (host):

Host IP address:
  

Record TTL (Time To Live):
 Seconds ▼

Record comments:

☐ Update Reverse Zone

Figure 17: A Record

Once all the Records are created, click on Save Zone as shown below to save the zone and finish the Server configuration.

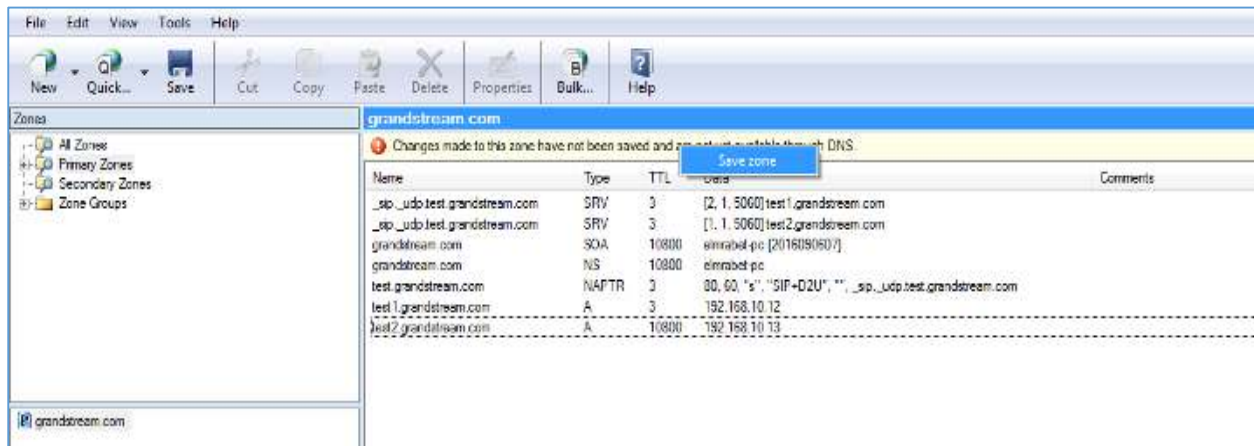


Figure 18: Save Settings